

USER MANUAL

MODEL 1088/C and 1088/D mDSL Modem with V.35 or X.21 Interface



PATTON
Electronics Co.



Part# 07M1088-UM
Doc# 03312U2-001
Rev. E
Revised 10/23/06

SALES OFFICE
(301) 975-1000
TECHNICAL SUPPORT
(301) 975-1007

An ISO-9001 Certified
Company

CONTENTS

| | | |
|------------|--|-----------|
| 1.0 | Warranty Information | 4 |
| 1.1 | Radio and TV Interference..... | 4 |
| 1.2 | CE Notice..... | 4 |
| 1.3 | Service..... | 5 |
| 2.0 | General Information..... | 6 |
| 2.1 | Features..... | 6 |
| 2.2 | Description..... | 6 |
| 3.0 | Configuration | 7 |
| 3.1 | Configuring the Hardware DIP Switches | 7 |
| | Configuration DIP Switch Set "S2" | 8 |
| | Switch S2-1, S2-2, S2-3, S2-4, and S-5 | 8 |
| | Switches S2-6 and S2-7: Clock Mode | 8 |
| | Switch S2-8: Enable/Disable Loop Tests from DTE | 8 |
| | Configuration Switch Set "S3" | 9 |
| | Switch S3-1: DTE Rate | 9 |
| | Switch S3-7: Reset Software Defaults | 10 |
| | Switch S3-8: Transmit Data (TD) Sampling Point | 11 |
| 3.2 | NetLink Plug-and-Play..... | 11 |
| 4.0 | Installation..... | 13 |
| 4.1 | Connecting the Twisted Pair Interface..... | 13 |
| 4.2 | Connecting the Model 1088/C (V.35) Serial Interface | 13 |
| | Connecting the Model 1088/C (V.35) to a "DTE" Device..... | 13 |
| | Connecting the Model 1088/C (V.35) to a "DCE" Device | 14 |
| 4.3 | Connecting the Model 1088/D (X.21) Serial Interface | 14 |
| | Connecting the Model 1088/D (X.21) to a "DCE" or "DTE" Device | 14 |
| | Opening the Case..... | 15 |
| 4.4 | Connecting Power | 16 |
| | Universal AC Power (100–240 VAC)..... | 16 |
| | 120 VAC Power (US)..... | 17 |
| | 230 VAC Power (International)..... | 17 |
| | DC Power | 17 |
| 5.0 | Operation..... | 18 |
| 5.1 | Power-Up..... | 18 |
| 5.2 | LED Status Monitors..... | 18 |
| | Model 1088 LED Descriptions Chart | 19 |
| 5.3 | Test Modes | 19 |
| | Overview..... | 20 |
| 5.4 | Loops and Patterns..... | 22 |
| | Using the V.52 (BER) Test Pattern Generator | 26 |
| A | Specifications | 27 |
| A.1 | Clocking Modes | 27 |
| A.2 | DTE Rate | 27 |
| A.3 | DTE Interface | 27 |

| | | |
|----------|--|-----------|
| A.4 | DTE Connector | 27 |
| A.5 | Diagnostics | 27 |
| A.6 | LED Status | 27 |
| A.7 | Configuration | 27 |
| A.8 | Power | 28 |
| A.9 | Compliance | 28 |
| A.10 | Transmission Line | 28 |
| A.11 | Line Coding | 28 |
| A.12 | Line Rates (DSL line) | 28 |
| A.13 | Line Interface | 28 |
| A.14 | mDSL Physical Connection | 28 |
| A.15 | Environment | 28 |
| B | Factory Replacement Parts and Accessories..... | 29 |
| C | Model 1088/C Interface Pin Assignments..... | 30 |
| D | Model 1088/D Interface Pin Assignments..... | 31 |
| E | Model 1088/C and 1088/D Transmission distance chart | 32 |

1.0 WARRANTY INFORMATION

Patton Electronics warrants all Model 1088 components to be free from defects, and will—at our option—repair or replace the product should it fail within one year from the first date of shipment.

This warranty is limited to defects in workmanship or materials, and does not cover customer damage, abuse or unauthorized modification. If this product fails or does not perform as warranted, your sole recourse shall be repair or replacement as described above. Under no condition shall Patton Electronics be liable for any damages incurred by the use of this product. These damages include, but are not limited to, the following: lost profits, lost savings and incidental or consequential damages arising from the use of or inability to use this product. Patton Electronics specifically disclaims all other warranties, expressed or implied, and the installation or use of this product shall be deemed an acceptance of these terms by the user.

Note Conformity documents of all Patton products can be viewed online at www.patton.com under the appropriate product page.

1.1 RADIO AND TV INTERFERENCE

The Model 1088 generates and uses radio frequency energy, and if not installed and used properly—that is, in strict accordance with the manufacturer's instructions—may cause interference to radio and television reception. The Model 1088 has been tested and found to comply with the limits for a Class A computing device in accordance with the specifications in Subpart J of Part 15 of FCC rules, which are designed to provide reasonable protection from such interference in a commercial installation. However, there is no guarantee that interference will not occur in a particular installation. If the Model 1088 does cause interference to radio or television reception, which can be determined by disconnecting the unit, the user is encouraged to try to correct the interference by one or more of the following measures: moving the computing equipment away from the receiver, re-orienting the receiving antenna and/or plugging the receiving equipment into a different AC outlet (such that the computing equipment and receiver are on different branches).

1.2 CE NOTICE

The CE symbol on your Patton Electronics equipment indicates that it is in compliance with the Electromagnetic Compatibility (EMC) directive and the Low Voltage Directive (LVD) of the European Union (EU). A Certificate of Compliance is available by contacting Technical Support.

1.3 SERVICE

All warranty and non-warranty repairs must be returned freight prepaid and insured to Patton Electronics. All returns must have a Return Materials Authorization number on the outside of the shipping container. This number may be obtained from Patton Electronics Technical Services at:

- Tel: **+1 (301) 975-1007**
- Email: **support@patton.com**
- URL: **http://www.patton.com**

Note Packages received without an RMA number will not be accepted.

Note The Model 1088 is flash upgradeable. Please refer to Patton website, or contact Technical Support for the latest version of the software.

2.0 GENERAL INFORMATION

Thank you for your purchase of this Patton Electronics product. This product has been thoroughly inspected and tested and is warranted for One Year parts and labor. If any questions or problems arise during installation or use of this product, please do not hesitate to contact Patton Electronics Technical Support at (301) 975-1007.

2.1 FEATURES

- Multi-Rate Symmetric DSL
- CAP (Carrierless Amplitude and Phase) Modulation
- Data Rates up to 2.304Mbps
- V.35 and X.21 Interfaces
- Interoperable with Popular Model 1095
- SNMP Manageable with 1095RC and 1001MC as 1001MC SNMP Agent Rack Card
- NetLink Plug 'n' Play for Easy Installations
- Universal Power Options, 120VAC, 230VAC and -48VDC Available
- Front Panel Status Indicators
- CE Marked

2.2 DESCRIPTION

The Patton Electronics mDSL Rocket provides high speed 2-wire connectivity to ISPs, PTTs, and corporations using mDSL (Multi-rate Symmetric Digital Subscriber Line) technology. Multi-rate DSL offers the ability to deliver the maximum bit rate that a twisted pair line can accommodate. Supporting multiple line rates from 144 kbps to 2.320 Mbps, the NetLink provides “mega-byte” speeds to leased line, LAN to LAN interconnection, and WAN access networks over 3.6 miles/5.8 km (1.054 Mbps on 24AWG/.5 mm wire).

Model 1088/C provides a V.35 interface on an M/34 female connector. Model 1088/D provides an X.21 interface on a DB-15 female connector. Features include loopback diagnostics, SNMP/HTTP remote management capabilities using NetLink Plug-and-Play and inband externally accessible configuration switches. All versions of the Rocket are compatible with Patton's popular Model 1095 standalone and 1095RC rack card.

As a symmetric DSL NTU, NetLink™ mDSL offers the same data rates in both directions over a single pair of regular telephone lines using Carrierless Amplitude and Phase (CAP) modulation. Line connection is made by an RJ-45 jack. Standard versions of Model 1088 are powered by a 100/230 VAC (Universal) supply. The DC power supply option supports any DC input between 36–72 VDC.

3.0 CONFIGURATION

The Model 1088 is equipped with two sets of eight DIP switches, which allow configuration of the unit for a wide variety of applications. This section describes switch locations and explains all possible configurations.

3.1 CONFIGURING THE HARDWARE DIP SWITCHES

The 16 external switches are grouped into two eight-switch sets, and are externally accessible from the underside of the Model 1088 (See Figure 1).

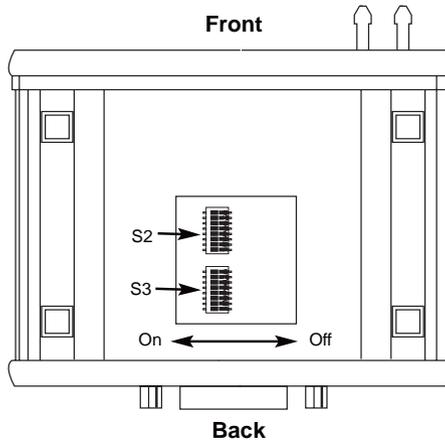


Figure 1. Underside of Model 1088, Showing Location of DIP Switches

The two sets of DIP switches on the underside of the Model 1088 will be referred to as S2 and S3. As Figure 2 shows, the orientation of all DIP switches is the same with respect to “ON” and “OFF” positions.

 


Figure 2. Close-up of configuration switches (all sets are identical in appearance)

Configuration DIP Switch Set “S2”

Switches S1-1 through S1-8 may be used to configure CO/CP operation, line framing and coding, CRC-4 operation, and DTE initiated loop diagnostics. Default settings of S1 switches are shown in Table 1.

Table 1: S2 Summary Table

| Position | Function | Factory Default | |
|----------|----------------------|-----------------|----------|
| S2-1 | Reserved | Off | |
| S2-2 | Reserved | Off | |
| S2-3 | Reserved | Off | |
| S2-4 | Reserved | Off | |
| S2-5 | Reserved | Off | |
| S2-6 | Clock Mode | On | Receive |
| S2-7 | Clock Mode | Off | Recover |
| S2-8 | Enable Loop from DTE | Off | Disabled |

Switch S2-1, S2-2, S2-3, S2-4, and S-5. Reserved for factory use and must remain in the OFF Position.

Switches S2-6 and S2-7: Clock Mode. Use Switches S2-6 and S2-7 to configure the 1088 for internal, external, or receive recover clock mode.

| CO/CP Unit | S2-6 | S2-7 | Clock Mode | Description |
|------------|------|------|-----------------|--|
| CO | On | On | Internal | Transmit clock generated internally |
| CO | Off | On | External (DTE) | Transmit clock derived from terminal interface |
| CP | On | Off | Receive Recover | Transmit clock derived from the received line |
| | Off | Off | | Reserved |

Switch S2-8: Enable/Disable Loop Tests from DTE. Switch S2-8 may be used to allow Model 1088/C to enter loopback diagnostic tests (Local or Remote) when the V.35 DTE raises the appropriate loop request pin (LLB: Pin L or RDL: Pin N). When Switch S2-8 is in the On position, the Model 1088/C will enter Local Loopback or Remote Loopback at the request of the DTE. When Switch S2-8 is in the Off position, the Model

1088/C ignores DTE loop requests. In the Off position, loop requests may still be initiated by the front panel switch.

| S2-8 | Setting |
|------|-------------------------------|
| On | DTE Loopback Request Enabled |
| Off | DTE Loopback Request Disabled |

Configuration Switch Set “S3”

Use the six DIP Switches in Switch S3 to enable the DTE bit rate. The following table summarizes default positions of DIP Switch S3. Detailed descriptions of each switch follow the table.

Table 2: S3 Summary Table

| S3 SUMMARY TABLE | | |
|------------------|----------------------------|---------------------|
| Position | Function | Factory Default |
| S3-1 | DTE Rate | On |
| S3-2 | DTE Rate | Off |
| S3-3 | DTE Rate | Off |
| S3-4 | DTE Rate | Off |
| S3-5 | DTE Rate | On |
| S3-6 | DTE Rate | On |
| S3-7 | Reset Software Defaults | On Normal Operation |
| S3-8 | Transmit Data Sample Point | On Normal Operation |

Switch S3-1: DTE Rate. Use Switch S3-1 through S3-6 to set the DTE bit rate.

| S3-1 | S3-2 | S3-3 | S3-4 | S3-5 | S3-6 | DTE Rate (kbps) |
|------|------|------|------|------|------|-----------------|
| Off | Off | On | On | On | On | 64 |
| On | On | Off | On | On | On | 128 |
| Off | On | Off | On | On | On | 192 |
| On | Off | Off | On | On | On | 256 |
| Off | Off | Off | On | On | On | 320 |
| On | On | On | Off | On | On | 384 |
| Off | On | On | Off | On | On | 448 |
| On | Off | On | Off | On | On | 512 |
| Off | Off | On | Off | On | On | 576 |
| On | On | Off | Off | On | On | 640 |
| Off | On | Off | Off | On | On | 704 |

| S3-1 | S3-2 | S3-3 | S3-4 | S3-5 | S3-6 | DTE Rate (kbps) |
|------|------|------|------|------|------|-----------------|
| On | Off | Off | Off | On | On | 768 |
| Off | Off | Off | Off | On | On | 832 |
| On | On | On | On | Off | On | 896 |
| Off | On | On | On | Off | On | 960 |
| On | Off | On | On | Off | On | 1024 |
| Off | Off | On | On | Off | On | 1088 |
| On | On | Off | On | Off | On | 1152 |
| Off | On | Off | On | Off | On | 1216 |
| On | Off | Off | On | Off | On | 1280 |
| Off | Off | Off | On | Off | On | 1344 |
| On | On | On | Off | Off | On | 1408 |
| Off | On | On | Off | Off | On | 1472 |
| On | Off | On | Off | Off | On | 1536 |
| On | On | Off | Off | Off | On | 1600 |
| Off | On | Off | Off | Off | On | 1664 |
| On | Off | Off | Off | Off | On | 1728 |
| Off | Off | Off | Off | Off | On | 1792 |
| On | On | On | On | On | Off | 1856 |
| Off | On | On | On | On | Off | 1920 |
| On | Off | On | On | On | Off | 1984 |
| Off | Off | On | On | On | Off | 2048 |
| On | On | Off | On | On | Off | 2112 |
| Off | On | Off | On | On | Off | 2176 |
| On | Off | Off | On | On | Off | 2240 |
| Off | Off | Off | On | On | Off | 2304 |

Note Based on the DTE rate chosen, the Model 1088 will automatically select the optimum line rate depending on distance and line conditions for the distance. The line selection will be based on the lowest line rate that will support the DTE rate.

Switch S3-7: Reset Software Defaults. Switch S3-7 allows the user to reset the software configured factory defaults. This will only be needed when using the Model 1001MC to SNMP manage your units. For more information, please refer to the Model 1001MC Operations Manual.

| S3-7 | Setting |
|------|------------------|
| On | Normal Operation |
| Off | Reset |

Switch S3-8: Transmit Data (TD) Sampling Point. Switch 3-8 controls the Transmit Data (TD) sampling point.

| S3-8 | Setting | Description |
|------|---------|--|
| On | Normal | TD sampled on the falling edge of the 1088 Transmit Clock (TC) |
| Off | Invert | TD sampled on the rising edge of the 1088 Transmit Clock. |

3.2 NETLINK PLUG-AND-PLAY

The NetLink Plug-and-Play feature allows ISPs, carriers and PTTs to quickly upgrade the link speed for a customer without requiring the customer to re-configure the Customer Premise (CP) Model 1088. This feature also allows service providers to set up all of the configurations at the Central Office (on the rack cards) before installing the stand alone units, saving time spent configuring or re-configuring DIP switches.

The NetLink Plug-and-Play feature allows the user to configure the DTE rate (bandwidth allocation, see Switches S3-1 through S3-6) of the CP unit from the rack card at the Central Office (CO). The stand alone unit at the Customer Premise (CP) site will automatically configure itself to the DTE rate (Bandwidth Allocation) of the rack card. Other configuration parameters remain in the default setting.

Note NetLink Plug-and-Play is only available when using a rack-mounted NetLink Model 1095RC as the CO unit.

Follow the instructions below to activate NetLink Plug-and-Play between CO (Model 1095RC) and CP (Model 1088) units:

1. Set the Model 1095RC (CO) to either Internal or External clocking mode as defined by the application.
2. Set the Model 1088 (CP) to "NetLink Plug-and-Play CP" by setting all S2 and S3 DIP switches in the ON position as described in Figure 3.

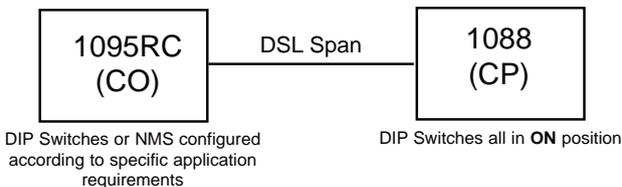


Figure 3. Typical NetLink Plug-and-Play Application

When the CO and CP units connect over DSL, the CP will enter a pre-defined default configuration (Receive Recovered Clocking). During the negotiation process between the units, the CO unit will configure the DTE rate/line rate on the CP unit as defined by the settings of the CO unit. When additional bandwidth is required, only the configuration of the CO unit should be changed. This feature gives ISPs, LECs and PTTs the ability to provision bandwidth on an as-needed basis to customers.

4.0 INSTALLATION

Once the Model 1088 is properly configured, it is ready to connect to the twisted pair interface, to the serial port, and to the power source. This section tells you how to make these connections.

4.1 CONNECTING THE TWISTED PAIR INTERFACE

The Model 1088 supports communication between two DTE devices at distances to 5 miles (8 km) over 24 AWG (.5 mm) twisted pair wire. Two things are essential:

1. These units work in pairs. Both units at the end of the twisted pair DSL span must be set for the same DTE rate.
2. To function properly, the Model 1088 needs one twisted pair of metallic wire. This twisted pair must be unconditioned, dry, metallic wire, between 19 (.9mm) and 26 AWG (.4mm) (the higher number gauges will limit distance). Standard dial-up telephone circuits, or leased circuits that run through signal equalization equipment, or standard, flat modular telephone type cable, are not acceptable.

The RJ-45 connector on the Model 1088's twisted pair interface is polarity insensitive and is wired for a two-wire interface. The signal/pin relationships are shown in Figure 4.

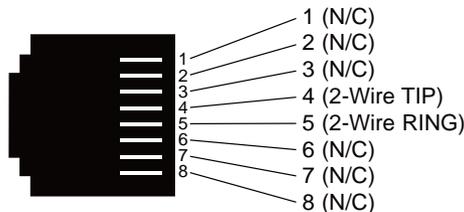


Figure 4. Model 1088 RJ-45 twisted pair line interface.

4.2 CONNECTING THE MODEL 1088/C (V.35) SERIAL INTERFACE

Model 1088/C supports V.35 serial port connections. This section describes how to connect the serial ports to your V.35 equipment.

Connecting the Model 1088/C (V.35) to a "DTE" Device

The Model 1088/C provides a V.35 DCE (Data Circuit Terminating Equipment) interface on an M/34 female connector. As a DCE, this interface is designed to connect to DTE equipment, such as a router. When connecting the V.35 interface of the Model 1088/C to your DTE device, use a

V.35 straight through cable (See Figure 5). Appendix C describes pin assignments and signal sources for the Model 1088/C V.35 interface. When purchasing or constructing an interface cable, please refer to the pin diagrams in Appendix C as a guide.

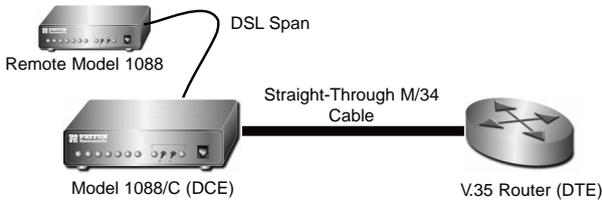


Figure 5. Connecting the Model 1088/C to V.35 Serial DTE

Connecting the Model 1088/C (V.35) to a “DCE” Device

The Model 1088/C provides a V.35 DCE (Data Circuit Terminating Equipment) interface on an M/34 female connector. As a DCE, this interface is designed to connect to DTE equipment, such as a router. However, tail-circuit applications require connection to another DCE equipment, such as a multiplexer. When connecting the V.35 interface of the Model 1088/C to your DCE device (see Figure 6), use a V.35 null modem cable. Some applications may also require the installation of a V.35 tail-circuit buffer to account for small differences in clock frequency between the 1088/C and the V.35 DCE (Multiplexer).

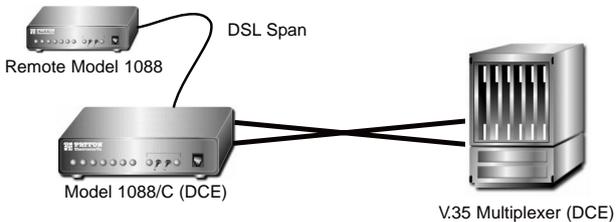


Figure 6. Connecting the Model 1088/C to V.35 Serial DCE

4.3 CONNECTING THE MODEL 1088/D (X.21) SERIAL INTERFACE

Model 1088/D supports X.21 serial port connections. This section describes how to connect the serial ports to your X.21 equipment.

Connecting the Model 1088/D (X.21) to a “DCE” or “DTE” Device

The Model 1088/D provides an X.21 interface on a DB-15 female connector. The X.21 interface default configuration is DCE (Data Circuit Terminating Equipment) for connection to DTE (Data Terminal Equipment)

such as a router. However, the X.21 interface on the Model 1088/D may be configured as DTE (Data Terminal Equipment) for connection to DCE such as a modem or multiplexer. When connecting the X.21 interface of the Model 1088/C to your DTE device, use a X.21 straight through cable (See Figure 7).

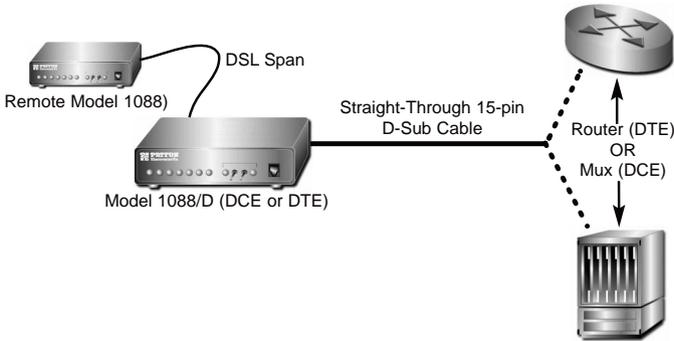


Figure 7. Connecting the Model 1088/D to X.21 DTE or DCE

To change the DCE/DTE orientation from the default position (DCE), you must open the Model 1088/D case.

Opening the Case

To open the Model 1088/D case, insert a flat head screw driver into an open slot on both sides of the case, as in Figure 8. Twist the screw driver head slightly and the top half of the case will separate from the lower half, as in Figure 8. Be careful not to damage the PC-board mounted components.

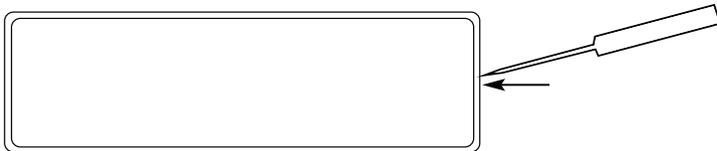


Figure 8. Opening the 1088 Case with a Small Screwdriver

The DCE/DTE strap is located on the top side of the 1088/D pc board (See Figure 9, below). The arrows on the top of the strap indicate the configuration of the X.21 port (for example, if the DCE arrows are pointing toward the DB-15 connector, the X.21 port is wired as a DCE). Change the DCE/DTE orientation by pulling the strap out of its socket, rotating it 180°, then plugging the strap back into the socket. You will see that the DCE/DTE arrows now point in the opposite directions, showing the new configuration of the X.21 port. To close the case, fit the 2 halves together snugly and snap them back in place.

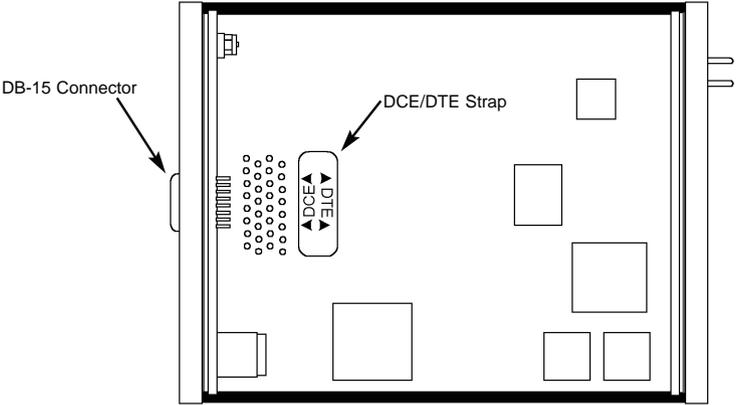


Figure 9. Setting the DCE/DTE Strap

4.4 CONNECTING POWER

The Model 1088 (all versions) are available with Universal AC (100-240VAC), 120VAC, 230VAC or -48VDC power options. This section describes these options.

Universal AC Power (100–240 VAC)

The Model 1088 uses a 5 VDC, 2A universal input 100–240 VAC, power supply (center pin is +5V). The universal input power supply has a male IEC-320 power entry connector. This power supply connects to the Model 1088 by means of a barrel jack on the rear panel. Many international power cords are available for the universal power supply (Please refer to Appendix B for country-specific power cords).

The Model 1088 powers up as soon as it is plugged into an AC outlet--there is no power switch.

120 VAC Power (US)

The 100–132 VAC adapter supplied with the U.S. version of the Model 1088 is a wall mount type and may be plugged into any approved 120 VAC wall jack.

230 VAC Power (International)

The 230 VAC adapter supplied with the International version of the Model 1088 is a wall mount type and may be plugged into any approved 230 VAC wall jack.

DC Power

The 36-60 VDC DC to DC adapter is supplied with the DC version of the Model 1088. The black and red leads plug into a DC source (nominal 48VDC) and the barrel power connector plugs into the barrel power supply jack on the rear panel of the 1088. (See Figure 10).



Figure 10. Connecting DC Power to the 48V-PSM DC Power Supply



There are no user-serviceable parts in the power supply section of the Model 1088. Fuse replacement should only be performed by qualified service personnel. Contact Patton Electronics Technical support at (301)975-1007, via our web site at <http://www.patton.com>, or by e-mail at support@patton.com, for more information.

5.0 OPERATION

Once the Model 1088 is properly configured and installed, it should operate transparently. This sections describes power-up, reading the LED status monitors, and using the built-in loopback test modes.

5.1 POWER-UP

To apply power to the Model 1088, first be sure that you have read section 4.4, “Connecting Power” on page 16, and that the unit is connected to the appropriate power source. Then power-up the unit.

5.2 LED STATUS MONITORS

The Model 1088 features six front panel LEDs that monitor power, the DTE signals, network connection and test modes. Figure 11 shows the front panel location of each LED. Following Figure 11 is a description of each LED’s function. See also, LED description chart on page 19.

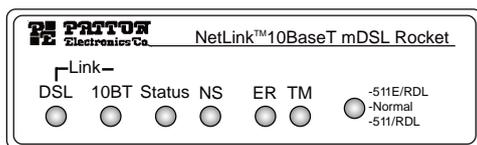


Figure 11. Model 1088/K Front Panel

DSL Link

(Active Green) Solid green (On) indicates that the end to end DSL Framer Link is up, signifying that the link across the DSL span is active. The DSL Link LED is Off when the link is down.

TD & RD

Glows yellow to indicate an idle condition of Binary “1” data on the respective terminal interface signals. Green indicates Binary “0” data

NS

(No Signal) Glows red to indicate that the local Model 1088 is not connected with the remote Model 1088.

ER

- Blinks ON/OFF after a 511/511E test has timed out. See “Using the V.52 (BER) Test Pattern Generator” on page 26 for more information.
- Flashes once to indicate that a CRC error has occurred (during normal operation) or bit errors have occurred (during 511/511E tests).

- Only at power up, blinks once every 200 ms if the DTE Rate is set to an unsupported settings

TM

Glows yellow to indicate that the Model 1095 has been placed in Test Mode. The unit can be placed in test mode by the local user or by the remote user. The TM LED will flash for 400msec when a valid packet is received from the Model 1001MC.

Model 1088 LED Descriptions Chart

| | Clock (CO) Internal 768Kb No DTE | | | | | | Clock (CP) R/R No DTE | | | | | |
|----------|----------------------------------|----|-----|-----|-----|-----|-----------------------|----|-----|-----|-----|-----|
| | TD | RD | DSL | NS | ER | TM | TD | RD | DSL | NS | ER | TM |
| Power ON | G | O | off | ON | off | off | O | O | off | ON | off | off |
| DSL Link | G | O | G | off | off | off | O | G | G | off | off | off |
| Link Brk | G | O | off | off | off | off | O | O | off | off | off | off |
| Brk+ 10s | G | G | off | ON | off | off | O | O | off | ON | off | off |
| RDL | G | G | G | off | off | ON | O | G | G | off | off | ON |
| RDL+511 | G | G | off | off | off | ON | O | G | off | off | off | ON |
| | With DTE Connected | | | | | | With DTE Connected | | | | | |
| Mark | O | O | G | off | off | off | O | O | G | off | off | off |
| Space | G | G | G | off | off | off | G | G | G | off | off | off |
| Data | GO | GO | G | off | off | off | GO | GO | G | off | off | off |

Link Brk = DSL Link Broken
 Brk+10s = 10 Seconds following Link Break
 G=GREEN
 O=ORANGE
 ON= ON
 off= OFF
 Y=yellow

Figure 12. LED descriptions chart

5.3 TEST MODES

The Model 1088 offers two proprietary loopback test modes, plus a built-in V.52 BER test pattern generator to evaluate the condition of the modems and the communication link. These tests can be activated physically from the front panel or via the DTE interface.

Overview

Figure 13 shows the major elements used in the loop-back and pattern tests available in the Model 1088. Each block has several functions. Following Figure 13 are descriptions that show how the elements are used during Test Modes.

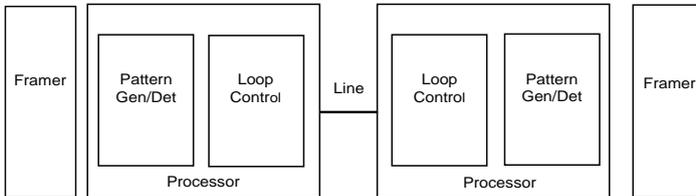


Figure 13. Block Diagram Model 1088

Framer

The framer is used to determine the status of the line. In normal operation the framer transmits and expects to receive framed packets from the far end. If the framer receives framed packets from the far end, CTS and CD will be active. If framed packets are not received, CTS and CD will be inactive. The restart procedure uses this information to determine if a valid connection is made (cable disconnect, poor cable quality, etc). In normal Data Mode, if the Model 1088 receives 4 seconds of unframed packets it will restart and begin trying to re-establish a connection with the far end. The distinction between framed packets and unframed packets becomes important when we discuss the Pattern Generator.

Pattern Gen/Det

This part of the Processor generates and detects the 511/511E patterns. When transmitting 511 patterns, the information is unframed (because it originates after the framer) and is intended to be evaluated only by another Processor. If the units are in Data Mode and the pattern generator is enabled on one end of the link, the far end will begin receiving unframed packets and assume that the line has gone down. During test modes, we force the pattern generator to time out before it can cause the link to be killed.

Loop Control

This part of the Processor is used to control loop-backs. In a Local Loop, the data is looped back towards the local DTE. In a Remote Loop, the data is looped back to the line, but it is also allowed to pass through to the framer and to the remote DTE.

Restart Procedure and Time Outs

The restart procedure is in place to allow the units to re-estab-

lish a connection after the framer begins seeing unframed packets. The Test Model Timing Chart below shows the amount of time the framer must see consecutive unframed packets before the unit will restart and try to establish a new line connection. The reason that there are different Restart Times will become apparent after reading the rest of the document. The 511/511E Time Out shown refers to the amount of time the 511/511E pattern will be valid. At the end of this time the pattern will automatically turn itself off and the normal data path will be re-established. The ER led will flash indicating to the user that the test has timed out. The ER led will stop flashing once the 511/511E switch is placed into the normal position.

Symbol Indicators

| Test Mode Timing | |
|----------------------------|--|
| Item | Elapsed Time (seconds) |
| Start Up | 50 |
| Data Mode | 4 |
| 511/511E Generator Enabled | 60 (The generator will stop after 45 seconds.) |
| Remote End of an RDL | 60 |
| 511/511E Time Out | 45 (The pattern generator will automatically turn off after 45 seconds. The ER LED will flash until the user turns off the 511/511E switch.) |



This symbol designates the origination or the termination of a data path. The direction of the arrow connected distinguish the two data paths.



This symbol designates an invalid data path. If there is data present it should be ignored.

5.4 LOOPS AND PATTERNS

The following section describes the Test Modes used in the Model 1088. At the bottom of each Test Mode, a figure is included to show the data path..

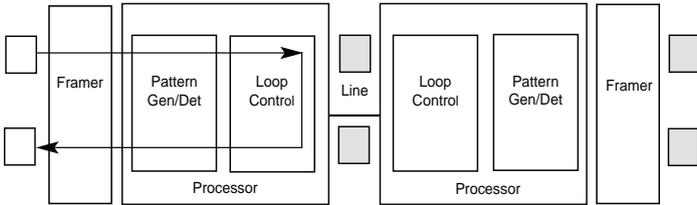


Figure 14. Block Diagram Local Loop Mode 1

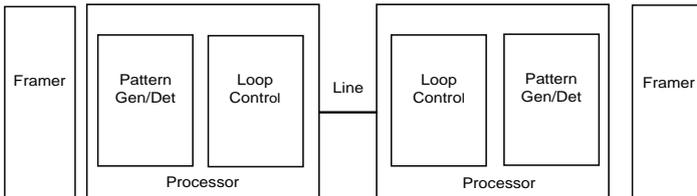


Figure 15. Block Diagram Local Loop Mode 2

Local Loop

There are two different modes of operation for a Local Loop depending on the status of the units at the time that the Local Loop is initiated. If the units are not in linked (NS LED on) and the Local Loop is initiated, either by the front panel switch or the DTE interface, the unit will enter mode 1. If the units are linked, NS LED off, then the unit will enter a mode 2 Local Loop.

A Mode 1 Local Loop is shown in Figure 14. When the Local Loop is initiated, either by the front panel switch or the DTE interface, the loop will be activated within the local Processor. The data present at the local DTE interface will be looped back to the local DTE by the Loop Control block within the Processor. Any data present on the line or at the far end DTE interface is invalid. The remote unit will remain in the StartUP mode, NS LED on, CTS LED yellow, and CD LED yellow, until the local unit is taken out of the Local Loop mode. After the Local Loop is deselected, the units will both be in StartUP mode and the link will be established.

A mode 2 Local Loop is shown in Figure 15. When the Local Loop is initiated, either by the front panel switch or the DTE interface, two separate loop paths will be started. In the first path, data presented to the local DTE interface will be looped back to the local DTE within the framer. In the second path,

data presented at the far end DTE will be transmitted to the local DTE and then looped back within the local DTE Loop Control block with the Processor. After the Local Loop is deselected, the units will be placed back into DataMode and the normal data paths will be re-established.

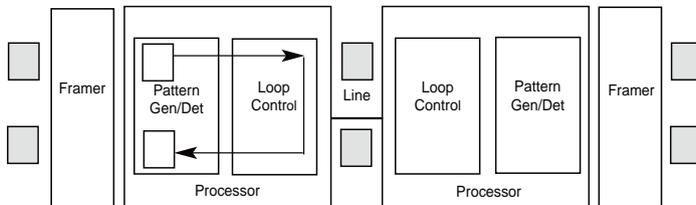


Figure 16. Block Diagram Local Loop Mode 1 with 511/511E

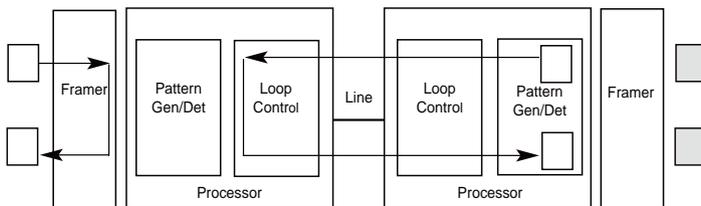


Figure 17. Block Diagram Local Loop Mode 2 with 511/511E

Local Loop with 511/511E

When the unit is placed into a Mode 1. Local Loop and the 511/511E pattern generator is activated, the local pattern generator begins sending out a 511/511E pattern to the Loop Control block. The Loop Control block will loop this data back to the 511/511E pattern detector block, which will evaluate the data for errors. Because the 511/511E pattern generator is contained within the Processor the data is unframed so the framer will begin seeing unframed packets. The framer receives this unframed data and can not distinguish this information from a line disconnection (this would cause the units' Restart procedure to start). What we have done to allow this mode to work is to add time outs for the pattern generators. When the 511/511E is initiated, the line restart procedure is changed to one minute. The 511/511E pattern will timeout after 45 seconds. So if the 511/511E is turned on during a local loop, the restart procedure is set to one minute, but the 511/511E pattern will time out after 45 seconds, allowing the framer to begin seeing framed packets (and not restart the box).

After the 511/511E pattern times out, the ER led will begin flashing. It will remain this way until the pattern generator switch is turned off. Note that the data at the local DTE and the remote

DTE are not valid. Because the data is unframed there is no way for the framer to send this data out to the DTE. This is an important distinction because other Patton units will send out the 511 pattern.

When the unit is placed into a Mode 2 Local Loop, the 511/511E pattern generator on the local unit is unavailable for transmission. As can be seen from Figure 11, the 511/511E pattern generator has no data path connections available. The 511/511E pattern generator is still available on the remote unit. For more information on the proper operation of this pattern generator please refer to the "Remote Digital Loop with 511/511E" section.

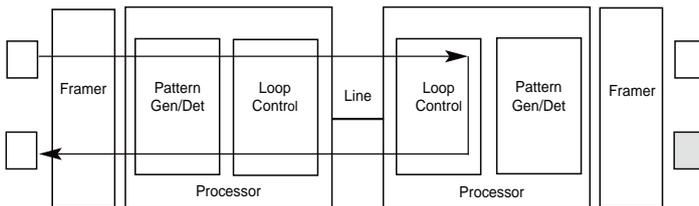


Figure 18. Block Diagram Remote Loop

Remote Digital Loop

The Remote Loop uses the EOC channel (an out-of-band signaling channel) to establish the remote link. Upon the RDL switch being thrown or DTE initiation, a RDL_ON Request signal is sent to the remote unit. The Remote unit then responds with an RDL Acknowledge command and the link is established. Data originates at the local DTE and is looped at the Remote PROCESSOR back to the Local DTE. Note that the data is also passed through to the Remote DTE and is not squelched. When a Remote unit enters RDL, it changes its' Restart timeout to one minute (the reason will be explain in the RDL with 511/511E section). If the line is disconnected, the local unit will Restart (NS led activated) after 4 - 6 seconds, but the Remote unit will wait for one minute before it Restarts. Note that the transmit data at the Remote DTE is ignored. When the switch is thrown or the DTE removes the RDL request, the local unit will transmit an RDL_OFF Request to the Remote unit. The local unit will keep its' TM led active until this request has been completely sent out. If the switch is thrown again before the completion of the termination phase the switch will be ignored until it is placed back into the normal position.

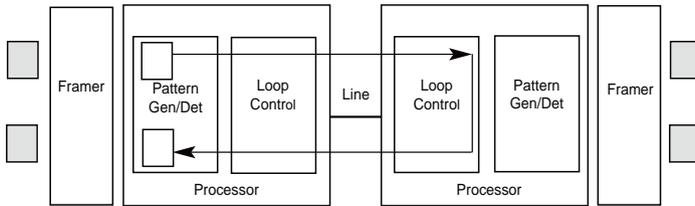


Figure 19. Block Remote Loop with 511/511E

Remote Digital Loop with 511/511E

The Remote Digital Loop with 511/511E is shown above. After RDL is established the Remote units' Restart Timer is set to one minute. This has been done because when the 511/511E generator is started on the local unit, the Remote framer begins seeing unframed packets. The Remote unit can not distinguish the 511/511E pattern from the line being disconnected so the Restart Timer has been lengthened to allow the pattern generator to function. Once the 511/511E test is started, the Local unit changes its' Restart Timer to one minute. The pattern originates within the Processor and is sent to the Remote unit. It is then looped back to the Local unit where it is evaluated for errors. After 45 seconds, the Pattern Generator will timeout and stops sending the pattern. The ER led will begin blinking until the user turns off the 511/511E switch.

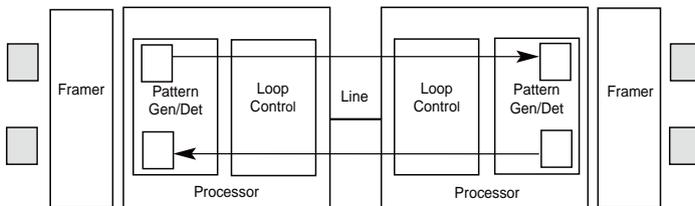


Figure 20. Block Diagram DataMode with 511/511E

Data Mode with 511/511E Pattern Generators

When the units enter DataMode it is possible to turn on the 511/511E pattern generators on both ends of the link. Once a 511/511E pattern is selected on one end of the link, the pattern generator will begin transmitting unframed 511/511E through the line to the Remote end. A possible problem with this test can occur due to the Restart procedure. Once the Local 511/511E is turned on, the Remote unit begins receiving an unframed 511 pattern. If the Remote unit does not turn on the 511/511E-pattern generator within 4 seconds, the Remote unit will Restart and enter the StartUp mode. Note that once the 511/511E-pattern generator is started the Restart timer is changed to one minute (only on the unit which has the pattern enabled). If both

units enable the 511/511E pattern within 4 seconds of each other, both units will be transmitting and receiving the 511/511E pattern. Both framers are now receiving unframed data and will restart after one minute. The 511/511E pattern generators will TimeOut after 45 seconds re-enabling the normal data path. The ER led will begin flashing until the user terminates the test.

Using the V.52 (BER) Test Pattern Generator

To use the V.52 BER tests in conjunction with the Remote Digital Loopback tests (or with Local Line Loopback tests), follow these instructions:

1. Locate the “511/511E” toggle switch on the front panel of the 1088 and move it UP. This activates the V.52 BER test mode and transmits a “511” test pattern into the loop. If any errors are present, the local modem’s red “ER” LED will blink sporadically.
2. If the above test indicates no errors are present, move the V.52 toggle switch DOWN, activating the “511/E” test with errors present. If the test is working properly, the local modem’s red “ER” LED will glow. A successful “511/E” test will confirm that the link is in place, and that the Model 1095’s built-in “511” generator and detector are working properly.

Note The above V.52 BER tests can be used independently of the Remote Digital Loopback tests. This requires two operators: (1) to initiate and monitor the tests at the local Model 1088, and (2) to do the same at the remote Model 1088. In this case, the test pattern sent by each Model 1088 will not be looped back, but will be transmitted down the line to the other Model 1088. While one operator initiates test, the other monitors for errors.

APPENDIX A

SPECIFICATIONS

A.1 CLOCKING MODES

Internal, External, or Receive Recovered

A.2 DTE RATE

All 64k steps from 64 to 2304 kbps

A.3 DTE INTERFACE

V.35 (Model 1088/C), DCE Orientation;

X.21 (Model 1088/D), DCE or DTE Orientation depending upon orientation of PC-board mounted daughter board

A.4 DTE CONNECTOR

M/34 Female (Model 1088/C)

D-Sub-15 Female (Model 1088/D)

A.5 DIAGNOSTICS

V52 compliant (511/511E) pattern generator and detector with error injection mode controlled by front panel switch, Local and Remote Loop-back control by either a front panel switch or from the DTE interface

A.6 LED STATUS

The following LEDs are displayed on the front panel:

- DSL Link (Green Active) - DSL Link Active
- TD, RD (Yellow/Green) - Idle Yellow
- NS (Red Active) - No signal DSL Link
- ER (Flashing Red) - CRC error during normal operation, bit error during pattern generation test
- TM (Active Yellow) - Test Mode Enabled

A.7 CONFIGURATION

Externally accessible dip switches or SNMP managed through 1095RC

A.8 POWER

+5 VDC external desk top power supply, 90-260VAC, 50-60 Hz (Universal Input), 10W or -48 VDC

A.9 COMPLIANCE

FCC Part 15, CE, CTR1

A.10 TRANSMISSION LINE

Single Twisted Pair

A.11 LINE CODING

CAP (Carrierless Amplitude and Phase Modulation)

A.12 LINE RATES (DSL LINE)

144, 272, 400, 528, 784, 1040, 1552, 2064, 2320 kpbs

A.13 LINE INTERFACE

Transformer coupled, 1500 VAC isolation

A.14 MDSL PHYSICAL CONNECTION

RJ-45, 2 wire, polarity insensitive pins 4 and 5

A.15 ENVIRONMENT

Operating temperature 0–50°C; humidity 5–95% non-condensing; altitude, 0–15,000 feet (0–4,600 m)

APPENDIX B
FACTORY REPLACEMENT PARTS AND ACCESSORIES

| Model # | Description |
|-----------|--|
| 1088/C | V.35 mDSL Rocket (CAP) |
| 1088/D | X.21 mDSL Rocket (CAP) |
| 080551 | 120V Power Supply |
| 080552 | 230V Power Supply |
| 48V-PSM | DC Power Supply Module |
| 08055DCUI | 100-240VAC (+5V \pm 5% reg. DC/2A) Universal Input Adapter |
| 0805EUR | European Power Cord CEE 7 ("A") |
| 0805UK | United Kingdom Power Cord ("D") |
| 0805US | American Power Cord ("K") |
| 0805AUS | Australia/New Zealand Power Cord ("C") |
| 0805DEN | Denmark Power Cord ("E") |
| 0805FR | France/Belgium Power Cord ("F") |
| 0805IN | India Power Cord ("G") |
| 0805IS | Israel Power Cord ("H") |
| 0805JAP | Japan Power Cord ("J") |
| 0805SW | Switzerland Power Cord ("L") |
| 07M1088/C | User Manual |

APPENDIX C

MODEL 1088/C INTERFACE PIN ASSIGNMENTS

V.35 Interface
(M/34 Female Connector)
(DCE Orientation)

| Pin # | Signal |
|-------|---|
| B | SGND (Signal Ground) |
| C | RTS (Request to Send) (DTE Source) |
| D | CTS (Clear to Send) (DCE Source) |
| E | DSR (Data Set Ready) (DCE Source) |
| F | CD (Carrier Detect) (DCE Source) |
| H | DTR (Data Terminal Ready) (DTE Source) |
| L | LLB (Local Line Loop) (DTE Source) |
| M | TM (Test Mode) (DTE Source) |
| N | RDL (Remote Digital Loop) (DTE Source) |
| P | TD (Transmit Data) (DTE Source) |
| R | RD (Receive Data) (DCE Source) |
| S | TD/ (Transmit Data-B) (DTE Source) |
| T | RD/ (Receive Data-B) (DCE Source) |
| U | XTC (External Transmit Clock) (DTE Source) |
| V | RC(Receiver Clock) (DCE Source) |
| W | XTC/ (External Transmit Clock) (DTE Source) |
| X | RC/ (Receiver Clock) (DCE Source) |
| Y | TC (Transmitter Clock-A) (DCE Source) |
| AA | TC/ (Transmit Clock-B) (DCE Source) |

APPENDIX D

MODEL 1088/D INTERFACE PIN ASSIGNMENTS

X.21 Interface
(D-Sub-15 Female Connector)
(DTE /DCE Orientation)

| Pin # | Signal |
|-------|---|
| 1 | Frame Ground |
| 2 | T (Transmit Data-A) (DTE Source) |
| 3 | C (Control-A) (DTE Source) |
| 4 | R (Receive Data-A) (DCE Source) |
| 5 | I (Indication-A) (DCE Source) |
| 6 | S (Signal Element Timing-A) (DCE Source) |
| 7 | BT (Byte Timing-A) (DCE Source) |
| 8 | SGND (Signal Ground) |
| 9 | T/ (Transmit Data-B) (DTE Source) |
| 10 | C/ (Control-B) (DTE Source) |
| 11 | R/ (Receive Data-B) (DCE Source) |
| 12 | I/ (Indication-B) (DCE Source) |
| 13 | S/ (Signal Element Timing-B) (DCE Source) |
| 14 | BT/ (Byte Timing-B) (DCE Source) |

APPENDIX E

MODEL 1088/C AND 1088/D TRANSMISSION DISTANCE CHART

Table 3: Transmission Distance - Patton NetLink Model 1088

| Transmission Distance - Patton NetLink Model 1088 | | | | | | | | |
|--|---------------------|------------------------------------|-------|-----|----------------|-------|-----|--|
| | | No Cross Talk | | | | | | |
| Line Rate kbps | DTE Rates | 26 AWG (0.4mm) | | | 24 AWG (0.5mm) | | | |
| | | feet | miles | km | feet | miles | km | |
| 144 | 64, 128 | 21400 | 4.0 | 6.6 | 30700 | 5.8 | 9.4 | |
| 272 | 192, 256 | 20300 | 3.8 | 6.2 | 30600 | 5.8 | 9.4 | |
| 400 | 320, 384 | 18600 | 3.5 | 5.7 | 29100 | 5.5 | 9 | |
| 528 | 448, 512 | 17400 | 3.3 | 5.4 | 26100 | 4.9 | 8.0 | |
| 784 | 576, 640, 704, 768 | 15800 | 3.0 | 4.9 | 22600 | 4.3 | 7.0 | |
| 1040 | 832, 896, 960, 1024 | 15500 | 2.9 | 4.8 | 22100 | 4.2 | 6.8 | |
| 1552 | 1088 - 1536 | 13600 | 2.6 | 4.2 | 19200 | 3.6 | 5.9 | |
| 2064 | 1600 - 2048 | 12200 | 2.3 | 3.8 | 17200 | 3.3 | 5.3 | |
| 2320 | 2112 - 2304 | 11500 | 2.2 | 3.5 | 15800 | 3.0 | 4.9 | |
| | | Cross Talk (49 adjacent CAP pairs) | | | | | | |
| Line Rate kbps | DTE Rates | 26 AWG (0.4mm) | | | 24 AWG (0.5mm) | | | |
| | | feet | miles | km | feet | miles | km | |
| 144 | 64, 128 | 16992 | 3.2 | 5.2 | 25000 | 4.7 | 7.7 | |
| 272 | 192, 256 | 15088 | 2.9 | 4.6 | 22000 | 4.2 | 6.8 | |
| 400 | 320, 384 | 13264 | 2.6 | 4.2 | 20000 | 3.8 | 6.2 | |
| 528 | 448, 512 | 12300 | 2.3 | 3.8 | 18000 | 3.4 | 5.5 | |
| 784 | 576, 640, 704, 768 | 10216 | 1.9 | 3.1 | 14000 | 2.6 | 4.3 | |
| 1040 | 832, 896, 960, 1024 | 8417 | 1.6 | 2.6 | 12000 | 2.3 | 3.7 | |
| 1552 | 1088 - 1536 | 7107 | 1.3 | 2.2 | 10000 | 1.9 | 3.1 | |
| 2064 | 1600 - 2048 | 5920 | 1.1 | 1.8 | 8000 | 1.5 | 2.5 | |
| 2320 | 2112 - 2304 | 5416 | 1.0 | 1.7 | 73000 | 1.4 | 2.2 | |

Copyright © 2000, 2006
Patton Electronics Company
All Rights Reserved.