

- 1 Set your LAN Local Area Connection Properties for Internet Protocol (TCP/IP) to "Obtain an IP address automatically" and to "Obtain DNS server address automatically."

- 2 Plug in Phone.




- 3 Plug in PC or LAN -- OR -- LAN Hub/Switch.



- 4 Connect to Internet Service Provider.

- 5 Plug in Power Adapter.

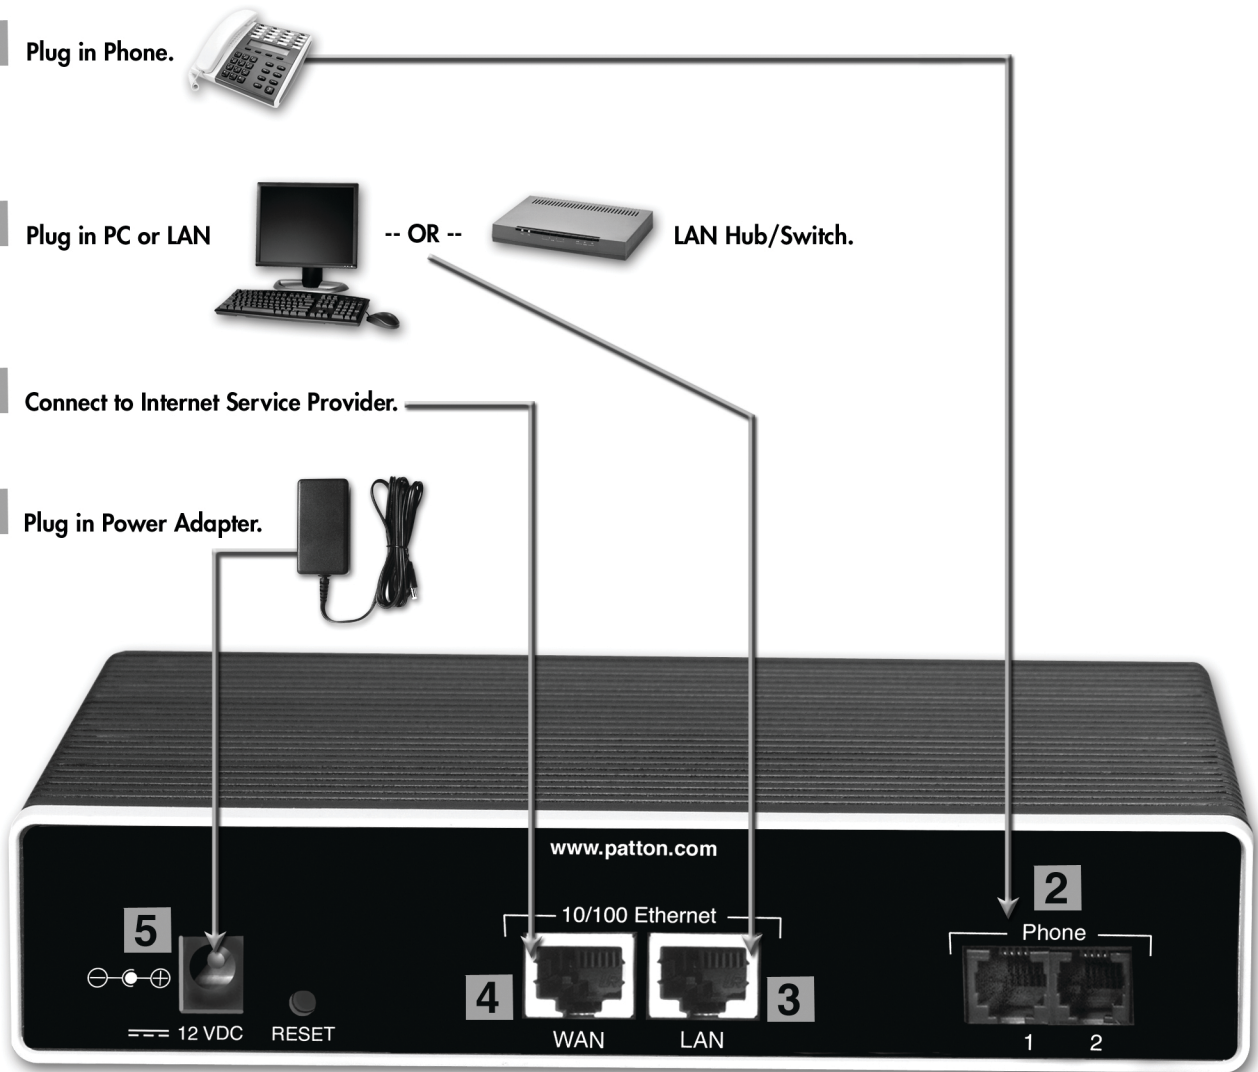

- 6 Wait 30 seconds after powering the SL4020 on. You should be able to use your browser to surf the Internet.

- 7 To log into your unit, type in "192.168.1.1" into your web browser. The default password is "root."

*** FOLLOW THE DIRECTIONS OF YOUR VOICE SERVICE PROVIDER TO SET UP VOICE SERVICES ***

For detailed information about the SL4020, refer to the *SmartLink 4020 User Manual* available online at:
www.patton.com/manuals/SL4020.pdf