


# PATTON

## SL4020 Quick Start Guide

- 1 Set your LAN Local Area Connection Properties for Internet Protocol (TCP/IP) to "Obtain an IP address automatically" and to "Obtain DNS server address automatically."

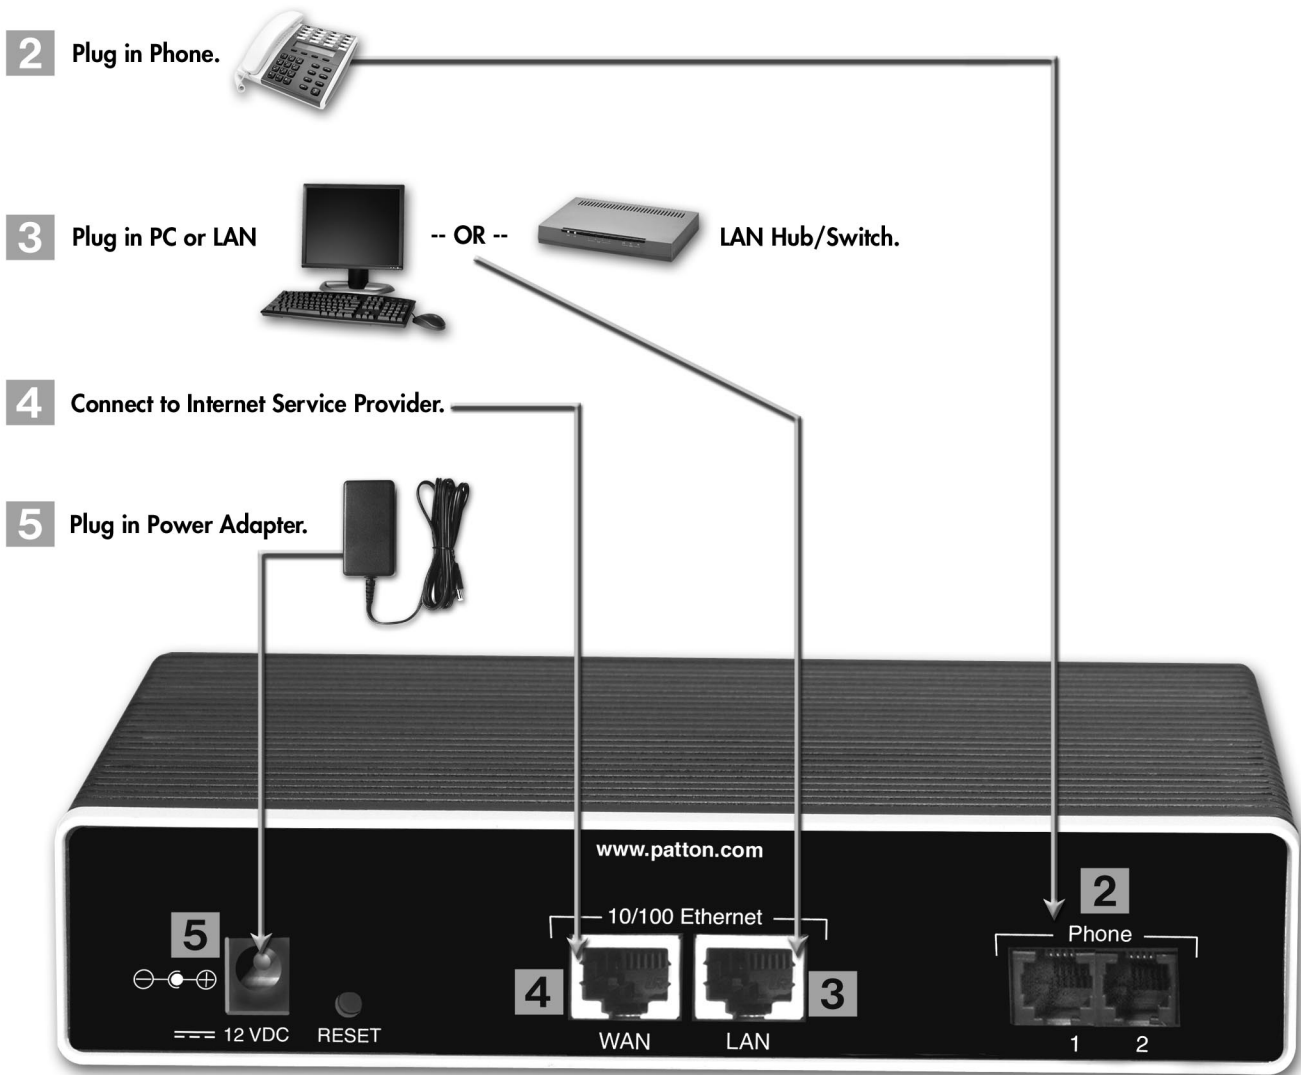

- 6 Wait 30 seconds after powering the SL4020 on. You should be able to use your browser to surf the Internet.
- 7 To log into your unit, type in "192.168.1.1" into your web browser. The default password is "root."

\*\*\* FOLLOW THE DIRECTIONS OF YOUR VOICE SERVICE PROVIDER TO SET UP VOICE SERVICES \*\*\*