```
June 12, 1997
              100013
The DIP switch settings for the model 2025 are:
Switch 1: Hardware/Software Control.
       off: Hardware.
      ON:
             Software.
Switch 2: LED Indicator.
       off: Disable LED.
       ON:
             Enable LED.
Switches 3, 4, & 5: Data, Parity & Stop Bit.
If you have a DIP switch setting and want to know what it signifies:
                              Parity StopBit
       SW3 SW4
                 SW5
                       Data
       off off
                 off
                               None
       off
            ON
                  off
                               Even
Odd
           ON
                  ON
                                        1
       off
       ON
                  off
                               Odd
            off
                         8
                                         1
                               None
       ON
            off
                 ON
       ON
            ON
                  off
                               Odd
       ON
                  ON
                               Even
If you know the configuration you want:
     Parity StopBit
Data
                1
                        off
                             off off
       None
       Even
                                    off
               1
                              off off
 8
       Odd
                        ON
                        ON
                              \bigcircNI
                                    \cap N
       Odd
                        off ON
                                   ON
                        ON
                              off
                                   ON
       None
                        off
                             off
                       ON
       Odd
                              ON
                                    off
Switches 6, 7, & 8: Data Rate.
If you have a DIP switch setting and want to know what it signifies:
             SW7
                   SW8
       SW6
                          Data Rate
       off
             off
                   off
                          9600 bps
       off
                   ON
                          38,400 "
       off
             ON
                    off
       off
             ON
                          2400
                   ON
       ON
             off
                    off
                          19,200 "
       ON
             off
                    ON
                          600
1200
       ON
             ON
                    off
       ON
             ON
                           4800
                   ON
If you know the configuration you want:
       Data Rate
                   SW6
                         SW7 SW8
                         off ON off ON
       300 bps
                   off
                                ON
       600
                   ON
                   ON
       2400
                   off
                         ON
                              ON
       4800
                   ON
                         ON
                               ON
                   off
                         off
       9600
                                off
                                off 100013|^Model 2025 DIP Switch Settings |^June 12, 1997|^The DIP switch settings for the model 2025 are:
       38,400
                   off
                         ON
Switch 1: Hardware/Software Control.
       off: Hardware.
      ON:
             Software.
Switch 2: LED Indicator.
       off: Disable LED.
             Enable LED.
Switches 3, 4, & 5: Data, Parity & Stop Bit.
If you have a DIP switch setting and want to know what it signifies:
       SW3 SW4 SW5 Data
                              Parity StopBit
                        8
       off off off
                  off
                               None
                  ON
                               Even
```

Model 2025 DIP Switch Settings

<u>Date</u>

Technote #

off

off

ON

ON

off

ON

Even

Odd

	ON	off off ON	off ON off	8 7 7	Odd None Odd	
		ON	ON	, 7 	Even	_
	know th					-
ata	Parity	Stopl		SW3	SW4	SW5
8	None Even	1 1		off off	off ON	off off
8	Odd	1		ON	off	off
7	Even	1		ON	ON	ON
7	Odd	1		off	ON	ON
7	None	2		ON	off	ON
7 7	Even Odd	2		off ON	off ON	ON off
SWITCH	es 6, 7,	. & 8:		Rate.		
If you	have a	DIP St	witch s	etting	g and w	ant t
	SW6	SW7	SW8		a Rate	
	off	off	off	960	00 bps	
	off off	off ON	ON off	300 38,	400 "	
	off	ON	ON		00 "	
	ON	off	off		200 "	
	ON ON	off ON	ON off	600 120) ")0 "	
	ON	ON	ON	480		
 If you	know th	ne con:	 figurat	ion yo	ou want	:
	Data F		 SW6	 SW7	 SW8	-
	300 bp	JS	off ON	off off	ON	
	1200		ON	ON	off	
	2400		off	ON	ON	
	4800 9600		ON off	ON off	ON off	
	19,200		ON	off	off	
	38,400	J	off	ON	off	^Su
						I