

USER MANUAL

MODEL 2174 CopperLINK™ High Speed Ethernet Extender



REGULATORY MODEL NUMBER:

03342D4-001

CE This is a Class A device and is not intended for use in a residential environment.

PATTON
Electronics Co.



Part# 07M2174-UM
Rev. D
Revised 7/5/12

SALES OFFICE
(301) 975-1000
TECHNICAL SUPPORT
(301) 975-1007

An ISO-9001 Certified
Company

CONTENTS

1.0	Warranty Information	4
1.1	Regulatory Information	4
	EMC Directive:.....	4
	Low-Voltage Directive (Safety):.....	4
	PSTN:.....	4
1.2	Radio and TV Interference (FCC Part 15)	4
1.3	CE Declaration of Conformity	5
1.4	Authorized European Representative	5
1.5	Service	5
1.6	Safety When Working With Electricity	6
2.0	General Information	8
2.1	Features.....	8
2.2	Description	8
3.0	Installation	9
3.1	Connecting the Line Interface.....	11
	Connecting the Line Interface for Model 2174/EUI or 2174/TB..	11
	Connecting the Line Interface for Model 2174/BNC	12
3.2	Connecting the 10/100Base-T Ethernet Interface	12
3.3	Connecting the POTS/ISDN Line (2174/S).....	13
3.4	Connecting Power	13
4.0	Configuration	14
4.1	Configuring the Hardware DIP switches	14
4.2	Configuring DIP Switch S1	14
	Switch S1-1: Local/Remote Configuration.....	15
	Switches S1-2 and S1-3: Symmetric/Asymmetric Operation	15
	Switch S1-5: General Protection (Signal to Noise Ratio)	15
5.0	Operation	16
5.1	Front Panel LED Status Monitors	16
A		
	Specifications	17
A.1	LAN Connection	17
A.2	Transmission Line	17
A.3	CopperLINK Line Rate and CopperLINK Distance	17
A.4	LED Status Indicators	17
A.5	Power Supply	17
A.6	Temperature Range	17
A.7	Humidity	17
A.8	Dimensions	17
B		
	Model 2174 Series Factory	
	Replacement Parts and Accessories	18
C		
	Model 2174 Series Interface Pin Assignment	19

C.1	10/100Base-T Interface	19
	RJ-45	19
C.2	CopperLINK Interface	19
	RJ-45	19
	Terminal Block.....	19
C.3	POTS/ISDN Interface (2174/S)	19
	RJ-45	19
D		
	Line Rate & Reach Chart, Based on 24 AWG (0.5 MM)	20

1.0 WARRANTY INFORMATION

Patton Electronics warrants all Model 2174 components to be free from defects, and will—at our option—repair or replace the product should it fail within one year from the first date of the shipment.

This warranty is limited to defects in workmanship or materials, and does not cover customer damage, abuse or unauthorized modification. If this product fails or does not perform as warranted, your sole recourse shall be repair or replacement as described above. Under no condition shall **Patton Electronics** be liable for any damages incurred by the use of this product. These damages include, but are not limited to, the following: lost profits, lost savings and incidental or consequential damages arising from the use of or inability to use this product. **Patton Electronics** specifically disclaims all other warranties, expressed or implied, and the installation or use of this product shall be deemed an acceptance of these terms by the user.

Note Conformity documents of all Patton products can be viewed online at www.patton.com under the appropriate product page.

1.1 REGULATORY INFORMATION

EMC Directive:

- FCC Part 15, Class A
- EN55022, Class A
- EN55024
- A-tick

Low-Voltage Directive (Safety):

- IEC/EN60950-1, 2nd Edition
- AS/NZS 60950-1, A-tick

PSTN:

- This device is not intended nor approved for connection to the PSTN

1.2 RADIO AND TV INTERFERENCE (FCC PART 15)

This device generates and uses radio frequency energy, and if not installed and used properly—that is, in strict accordance with the manufacturer's instructions—may cause interference to radio and television recep-

tion. The device has been tested and found to comply with the limits for a Class A computing device in accordance with specifications in Subpart B of Part 15 of FCC rules, which are designed to provide reasonable protection from such interference in a commercial installation. However, there is no guarantee that interference will not occur in a particular installation. If the device does cause interference to radio or television reception, which can be determined by disconnecting the unit, the user is encouraged to try to correct the interference by one or more of the following measures: moving the computing equipment away from the receiver, re-orienting the receiving antenna and/or plugging the receiving equipment into a different AC outlet (such that the computing equipment and receiver are on different branches).

1.3 CE DECLARATION OF CONFORMITY

Patton Electronics, Inc declares that this device is in compliance with the essential requirements and other relevant provisions of Directive 2004/108/EC relating to electromagnetic compatibility and Directive 2006/95/EC relating to electrical equipment designed for use within certain voltage limits. The Declaration of Conformity may be obtained from Patton Electronics, Inc at www.patton.com/certifications.

The safety advice in the documentation accompanying this device shall be obeyed. The conformity to the above directive is indicated by CE mark on the device.

1.4 AUTHORIZED EUROPEAN REPRESENTATIVE

D R M Green
European Compliance Services Limited.
Avalon House, Marcham Road
Abingdon, Oxon OX14 1UD, UK

1.5 SERVICE

All warranty and non-warranty repairs must be returned freight prepaid and insured to Patton Electronics. All returns must have a Return Materials Authorization number on the outside of the shipping container. This number may be obtained from Patton Electronics Technical Services at:

- Tel: **+1 (301) 975-1007**
- Email: **support@patton.com**
- URL: **<http://www.patton.com>**

Note Packages received without an RMA number will not be accepted.

1.6 SAFETY WHEN WORKING WITH ELECTRICITY



- This device contains no user serviceable parts. This device can only be repaired by qualified service personnel.
- Do not open the device when the power cord is connected. For systems without a power switch and without an external power adapter, line voltages are present within the device when the power cord is connected.
- For devices with an external power adapter, the power adapter shall be a listed Limited Power Source. The mains outlet that is utilized to power the device shall be within 10 feet (3 meters) of the device, shall be easily accessible, and protected by a circuit breaker in compliance with local regulatory requirements.
- For AC powered devices, ensure that the power cable used meets all applicable standards for the country in which it is to be installed.
- For AC powered devices which have 3 conductor power plugs (L1, L2 & GND or Hot, Neutral & Safety/Protective Ground), the wall outlet (or socket) must have an earth ground.
- For DC powered devices, ensure that the interconnecting cables are rated for proper voltage, current, anticipated temperature, flammability, and mechanical serviceability.
- WAN, LAN & PSTN ports (connections) may have hazardous voltages present regardless of whether the device is powered ON or OFF. PSTN relates to interfaces such as telephone lines, FXS, FXO, DSL, xDSL, T1, E1, ISDN, Voice, etc. These are known as “hazardous network voltages” and to avoid electric shock use caution when working near these ports. When disconnecting cables for these ports, detach the far end connection first.
- Do not work on the device or connect or disconnect cables during periods of lightning activity.



In accordance with the requirements of council directive 2002/96/EC on Waste of Electrical and Electronic Equipment (WEEE), ensure that at end-of-life you separate this product from other waste and scrap and deliver to the WEEE collection system in your country for recycling.



This device contains no user serviceable parts. This device can only be repaired by qualified service personnel.



This device is **NOT** intended nor approved for connection to the PSTN. It is intended only for connection to customer premise equipment.



Electrostatic Discharge (ESD) can damage equipment and impair electrical circuitry. It occurs when electronic printed circuit cards are improperly handled and can result in complete or intermittent failures. Do the following to prevent ESD:

- Always follow ESD prevention procedures when removing and replacing cards.
- Wear an ESD-preventive wrist strap, ensuring that it makes good skin contact. Connect the clip to an unpainted surface of the chassis frame to safely channel unwanted ESD voltages to ground.
- To properly guard against ESD damage and shocks, the wrist strap and cord must operate effectively. If no wrist strap is available, ground yourself by touching the metal part of the chassis.

2.0 GENERAL INFORMATION

Thank you for your purchase of this Patton Electronics product. This product has been thoroughly inspected and tested and is warranted for one year for parts and labor. If any questions or problems arise during installation or use of this product, contact Patton Electronics Technical Support at +1 (301) 975-1007.

2.1 FEATURES

- Variable rate CopperLINK extender - Easy to configure
- Auto-MDIX Ethernet
- Configurable 10/100, Full/Half, and Auto-Negotiating Ethernet
- Extends up to 4x 10/100Base-TX Ethernet beyond 328-foot (100-meter) limitation over a single twisted-pair, Cat 5e/6/7, or coaxial cable
- Symmetric or asymmetric settings via DIP switch
- Transparent operation
- LED indicators for Power, DSL Link, Ethernet Link/Activity, Remote and Local

2.2 DESCRIPTION

The Patton Electronics Model 2174 CopperLink modems provide high-speed LAN connections between peered Ethernet LANs, remote PCs, or any other network-enabled 10/100Base-T device.

Operating in pairs, one Model 2174 is configured as the (L) Local unit located at one end of the LAN extension and the other Model 2174 is configured as the (R) Remote unit at the other end. The Model 2174 is configured as a L or R via the switch on the bottom of the unit. These units can automatically forward LAN broadcasts, multicasts, and frames across a 2-wire voice-grade twisted-pair or BNC link. The data is passed transparently (unmodified) through the 2174s. The 2174s automatically add and delete MAC addresses, only passing packets across the CopperLINK link that are meant for the remote peered LAN.

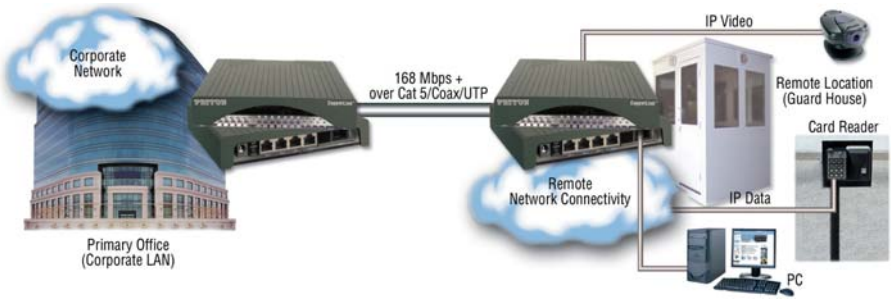


Figure 1. Typical application

The pair of 2174 models work together to create a transparent extension between two peered Ethernet LANs using twisted pair (2-wire), Cat5+, or 75-ohm BNC. Figure 1 shows a typical point-to-point application.

3.0 INSTALLATION




The Interconnecting cables shall be acceptable for external use and shall be rated for the proper application with respect to voltage, current, anticipated temperature, flammability, and mechanical serviceability.

To install the 2174 Ethernet Extender, do the following:


1. Connect the line interface between the units (refer to section 3.1, "Connecting the Line Interface" on page 11)

Note See Figure 2 for the Model 2174's rear panel arrangements.


2. Connect the Ethernet interface (refer to section 3.2, "Connecting the 10/100Base-T Ethernet Interface" on page 12).
3. Connect the power plug (refer to section 3.4, "Connecting Power" on page 13).

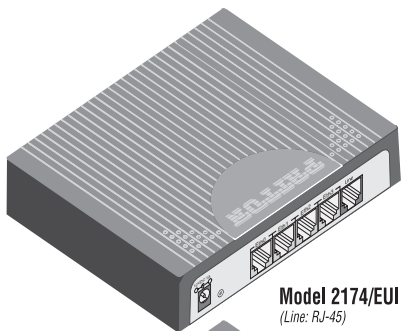


Model 2174/EUI
(Line: RJ-45)

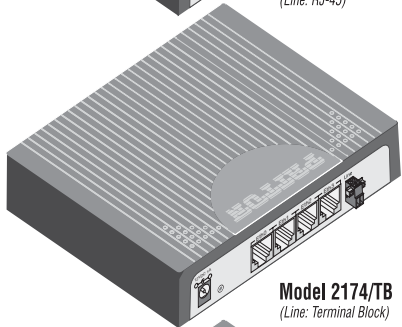

Model 2174/TB
(Line: Terminal Block)

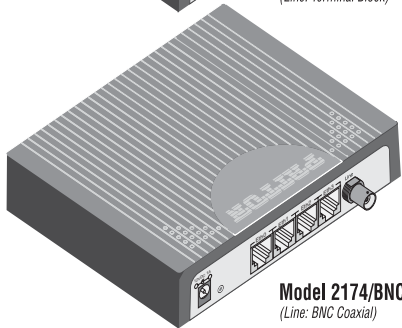

Model 2174/BNC
(Line: BNC Coaxial)

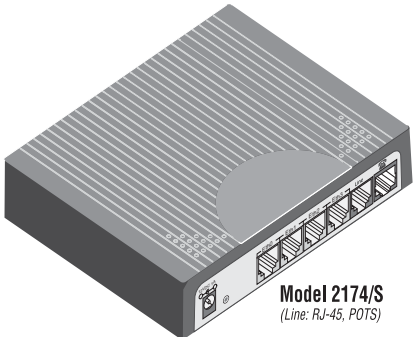

Model 2174/S
(Line: RJ-45, POTS)

Figure 2. Model 2174 rear panel options

3.1 CONNECTING THE LINE INTERFACE



The Interconnecting cables shall be acceptable for external use and shall be rated for the proper application with respect to voltage, current, anticipated temperature, flammability, and mechanical serviceability.

The Model 2174 supports communication between two peer Ethernet LAN sites over a distance of up to 10,000 ft (3 km) over 24 AWG (0.5 mm) twisted-pair wire, Cat5+, or 75-ohm BNC.

Note Actual distance and link performance may vary depending on the environment and type/gauge of wire used.

Follow the steps below to connect the Model 2174 CopperLINK Interfaces.

Note The Model 2174 units work in pairs. One of the units must be configured as a (L) Local unit, and the other unit must be configured as a (R) Remote unit.

Connecting the Line Interface for Model 2174/EUI or 2174/TB

1. To function properly, the two Model 2174s must be connected together using twisted-pair, unconditioned, dry, metal wire, between 19 (0.9mm) and 26 AWG (0.4mm). Leased circuits that run through signal equalization equipment are not acceptable.
2. The Model 2174 is equipped with an RJ-45 interface jack (Figure 3) or terminal block (Figure 4) that can be used on the CopperLINK interface. The CopperLINK interface is a two-wire interface. Observe the signal/pin relationships on the Model 2174's CopperLINK interface jack.

The RJ-45 connector on the Model 2174's twisted pair interface is polarity insensitive and is wired for a two-wire interface. The signal/pin relationship is shown in Figure 3.

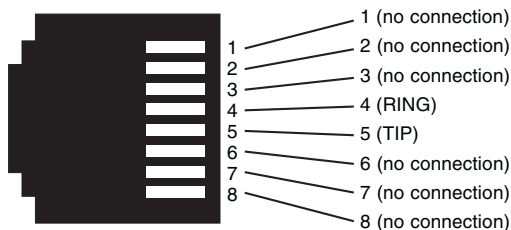


Figure 3. Model 2174 (RJ-45) twisted pair line interface.

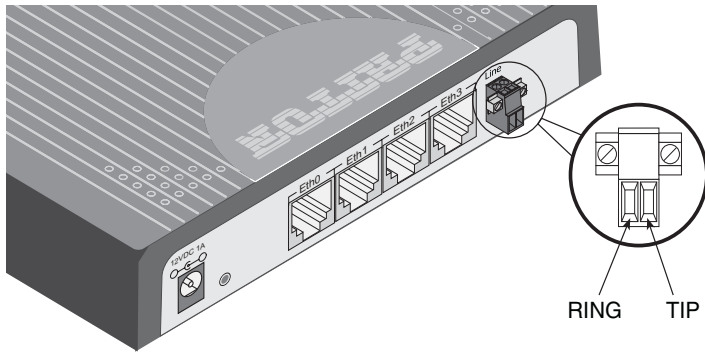


Figure 4. Model 2174 (Terminal Block) twisted pair line interface

Connecting the Line Interface for Model 2174/BNC

To connect the line interface of the Model 2174/BNC, simply use a coaxial cable with a BNC connector at each end to connect the pair of Model 2174s.

3.2 CONNECTING THE 10/100BASE-T ETHERNET INTERFACE



The interconnecting cables shall be acceptable for external use and shall be rated for the proper application with respect to voltage, current, anticipated temperature, flammability, and mechanical serviceability.

The RJ-45 ports labeled *Ethernet* are the Auto-MDIX10/100Base-T interface. These ports are designed to connect directly to a 10/100Base-T device or network. Figure 5 shows the signal/pin relationships on this interface. You may connect this port to a hub or PC using a straight through or crossover cable that is up to 328 ft long.

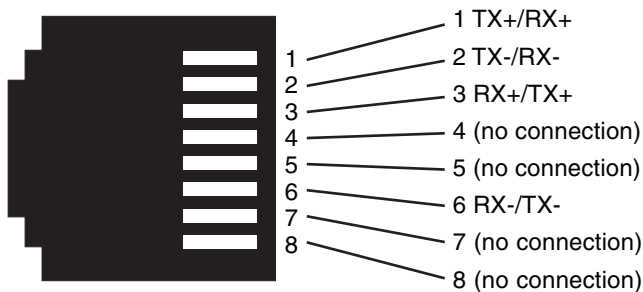



Figure 5. Model 2174 10/100Base-T RJ-45 Connector Pinout.

3.3 CONNECTING THE POTS/ISDN LINE (2174/S)

On the 2174/S model, the RJ-45 port labeled  is the POTS/ISDN interface. A telephone may be connected to this port and carried over the CopperLink line. The units do not need power for the POTS interface to work. The RJ-45 connector in the POTS/ISDN interface is wired as shown in Figure 6.

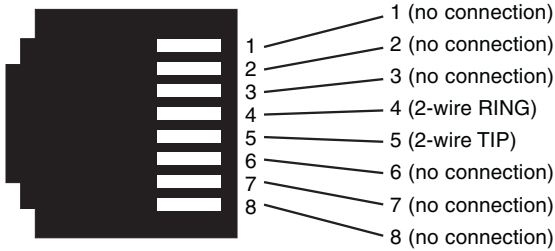


Figure 6. Model 2174/S (RJ-45) POTS/ISDN interface.

3.4 CONNECTING POWER



The Interconnecting cables shall be acceptable for external use and shall be rated for the proper application with respect to voltage, current, anticipated temperature, flammability, and mechanical serviceability.

The Model 2174 does not have a power switch, so it powers up as soon as it is plugged in.

An external AC or DC power supply is available separately. This connection is made via the barrel jack on the rear panel of the Model 2174. No configuration is necessary for the power supply (See Appendix B for domestic and international power supply and cord options).

DC power (supplied via the power supply jack to the 2174) must meet the following requirements; DC power supplied must be regulated 12VDC \pm 5%, 1.0A minimum. Center pin is +12V. The barrel type plug has a 2.5/5.5/10mm I.D./O.D./Shaft Length dimensions.

4.0 CONFIGURATION

The Model 2174 has eight DIP switches (S1) for configuring the unit for a wide variety of applications. This section describes switch locations and explains the different configurations.

4.1 CONFIGURING THE HARDWARE DIP SWITCHES

The DIP switches are externally accessible from the underside of the Model 2174. Figure 7 on page 14 shows the orientation of the DIP switches in the On and Off positions.

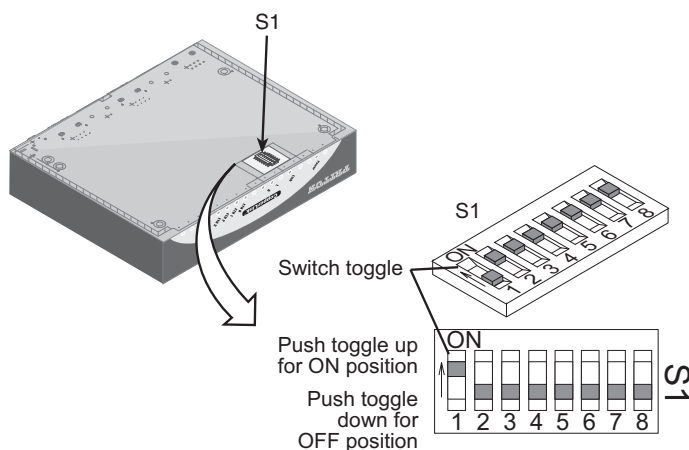


Figure 7. DIP switch orientation

4.2 CONFIGURING DIP SWITCH S1

DIP switch S1 is where you configure the CopperLINK line. The following tables describe the configuration for the 2174.

Table 1: S1 Summary

Position	Description
S1-1	Local/Remote Configuration
S1-2	Line Rate/Symmetry
S1-3	Line Rate/Symmetry
S1-4	Reserved
S1-5	SNR Margin
S1-6	Reserved
S1-7	Reserved
S1-8	Reserved

Switch S1-1: Local/Remote Configuration

Use switch S1-1 to configure the unit as Remote or Local in the Model 2174 pair.

Table 2: Local/Remote Unit Configuration

S1-1	Setting
ON	CPE/Remote
OFF	CO/Local

Switches S1-2 and S1-3: Symmetric/Asymmetric Operation

Use switches S1-2 and S1-3 to configure the CopperLink line rate type and operation.

Table 3: Symmetric/Asymmetric Selection Chart

S1-2	S1-3	Setting
OFF	OFF	High-Speed "Symmetric"
OFF	ON	High-Speed "Asymmetric"
ON	OFF	Long-Range "Symmetric"
ON	ON	Long-Range "Asymmetric"

Note See Appendix D on page 20 for line rate distances.

Switch S1-5: General Protection (Signal to Noise Ratio)

Use switch S1-5 to configure line noise protection.

Table 4: Signal to Noise Ratio

S1-5	Setting
ON	6dB
OFF	9dB

- **6dB:** Original line noise protection with 6dB SNR
- **9dB:** Better line noise protection with SNR up to 9dB

5.0 OPERATION

Once the Model 2174s are properly installed, they should operate transparently. No user settings required. This section describes reading the LED status monitors.

Before applying power to the Model 2174, please review section 3.4, “Connecting Power” on page 13 to verify that the unit is connected to the appropriate power source.

5.1 FRONT PANEL LED STATUS MONITORS

The Model 2174 features six front panel LEDs that monitor power, the Ethernet signals, the CopperLINK connection, and the remote/local setting. Figure 8 shows the front panel location of each LED. Table 5 on page 16 describes the LED functions.

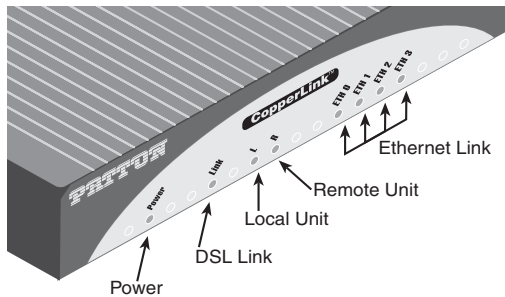


Figure 8. Model 2174 front panel

Table 5: Front panel LED description

LED	Status	Description
Power	Green	The device is powered on.
	Off	The device is powered off.
CopperLink	Green	The port is connected.
	Blinking Green	Data transceiving.
	Off	No valid link on this port.
Ethernet	Green	The port is connected.
	*Blinking Green	Data transceiving.
Local	Green	The device acts in Local mode.
	Off	Local mode is off.
Remote	Green	The device acts in Remote mode.
	Off	Remote mode is off.

*. Once the unit connects to a power source, the Link LED will blink as the 2174 automatically looks for the other unit in the pair.

APPENDIX A

SPECIFICATIONS

A.1 LAN CONNECTION

- Four RJ-45, 10/100Base-T, IEEE 802.3 Ethernet
- CopperLINK Connection: RJ-45

A.2 TRANSMISSION LINE

Two-wire unconditioned twisted pair or 75-ohm BNC

A.3 COPPERLINK LINE RATE AND COPPERLINK DISTANCE

- Line Rate: Up to 200 Mbps asymmetrical
- Distance: Up to 9,842 ft (3 km)

Note Distances depend on line rate and line conditions.

A.4 LED STATUS INDICATORS

- Power (Green)
- CopperLINK: Link (Green)
- Local (Green)
- Remote (Green)
- Ethernet: Link (Green) & Activity (Flashing Green)

A.5 POWER SUPPLY

External AC and DC options:

- AC: 120 VAC, 220 VAC, and UI (120–240 VAC)
- DC: 12 VDC, 24 VDC and 48 VDC
- Power consumption: 400mA at 12VDC

A.6 TEMPERATURE RANGE

0–50°C

A.7 HUMIDITY

Up to 90% non-condensing.

A.8 DIMENSIONS

6.22 W x 1.25 H x 4.75 D in. (157 W x 318 H x 120 D mm)

APPENDIX B
MODEL 2174 SERIES FACTORY
REPLACEMENT PARTS AND ACCESSORIES

Patton Model #	Description
Base Models	
2174/EUI-2PK	High Speed CopperLink Ethernet Extender Kit (Local and Remote); RJ45 Line, 100-240VAC
2174/TB/EUI-2PK	High Speed CopperLink Ethernet Extender Kit (Local and Remote); Terminal Block Line, 100-240VAC
2174/BNC/EUI-2PK	High Speed CopperLink Ethernet Extender Kit (Local and Remote); BNC Line, 100-240VAC
2174/S/EUI-2PK	High Speed CopperLink Ethernet Extender Kit (Local and Remote); RJ45 Line, POTS/ISDN, 100-240VAC
07M2174-UM	User Manual
Power Supplies	
PS-03671H1-002	100-240VAC (12V, DC/2A) Wall mount power adapter
Power Adapters	
12-130	European replacement plug
12-129	American replacement plug
12-131	United Kingdom plug
12-132	Australian/Chinese plug

APPENDIX C

MODEL 2174 SERIES INTERFACE PIN ASSIGNMENT

C.1 10/100BASE-T INTERFACE

RJ-45


- Pin 1: TX+
- Pin 2: TX-
- Pin 3: RX+
- Pin 6: RX-
- Pins 4, 5, 7, 8: no connection

C.2 COPPERLINK INTERFACE

RJ-45

- Pin 4: RING
- Pin 5: TIP
- Pins 1, 2, 3, 6, 7, 8: no connection

Terminal Block

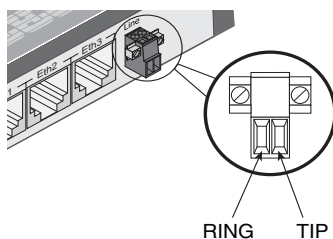

C.3 POTS/ISDN INTERFACE (2174/S)

RJ-45

- Pin 4: 2-wire RING
- Pin 5: 2-wire TIP

Pins 1, 2, 3, 6, 7, 8: no connection

APPENDIX D

LINE RATE & REACH CHART, BASED ON 24 AWG (0.5 MM)

Table 6: Line Rate & Reach Chart Using Twisted-Pair (Long Range)

Mode (Long Range)	Distance in Feet		Mbps	
	ft	m/km	DS	US
Symmetric	250 ft	76 m	68	40
	1000 ft	305 m	62	44
	2,000 ft	610 m	50	16
	3,000 ft	914 m	33	4
	5,000 ft	1.5 km	16	2
	10,000 ft	3 km	2.5	1
Asymmetric	250 ft	76 m	67	16
	1000 ft	305 m	59	16
	2,000 ft	610 m	45	11
	3,000 ft	914 m	31	5
	5,000 ft	1.5 km	17	682 kbps
	10,000 ft	3 km	4	263 kbps

Note The actual distance and link performance may vary depending on the environment and type/gauge of wire used.

Note DS = downstream, US = upstream

Note This chart applies to Model 2174s with a twisted-pair line interface: Model 2174/EUI and 2174/TB. Contact Patton for Model 2174/BNC rates.

Table 7: Line Rate & Reach Chart Using Twisted-Pair (High Speed)

Mode (High Speed)	Distance in Feet		Mbps	
	ft	m/km	DS	US
Symmetric	250 ft	76 m	121	144
	1000 ft	305 m	73	103
	2,000 ft	610 m	45	37
	3,000 ft	914 m	46	10
	3,500 ft	1 km	30	4
Asymmetric	250 ft	76 m	168	95
	1000 ft	305 m	126	54
	2,000 ft	610 m	60	21
	3,000 ft	914 m	42	6
	3,500 ft	1 km	35	1

Note The actual distance and link performance may vary depending on the environment and type/gauge of wire used.

Note DS = downstream, US = upstream

Note This chart applies to Model 2174s with a twisted-pair line interface: Model 2174/EUI and 2174/TB. Contact Patton for Model 2174/BNC rates.

NOTES

NOTES

Copyright © 2011-2012.
Patton Electronics Company
All Rights Reserved.