



Introduction

The information in this document is intended as a general guide to help you set up the babyTEL service on your SIP compatible telephone system. It contains only babyTEL-specific parameters that need to be configured on your Patton Trinity device. For full and proper functioning of the babyTEL service and all other features, your Patton device should be set up according to the detailed instructions provided by the manufacturer in their configuration guide.

Encryption Service License

If you are subscribing to a babyTEL encryption service and have purchased the Patton device from babyTEL, it will come with the Patton CryptAgent License pre-installed. If you purchased the device elsewhere, you must procure the Patton CryptAgent License and related installation instructions directly from Patton or their authorized reseller.

Configuration methods

The Patton Trinity devices can be configured in the following ways.

- **Auto-Provisioning:** babyTEL automatically configures the SIP parameters and channel assignments on supported Patton Trinity devices. See related section below.
- **Manual Configuration:** For control over the full range of configuration options you can:
 - Manually create a **Patton Trinity Configuration File**, using a text editor. See related section below.
 - Use the **Command Line Interface** available via the Patton device console. Contact Patton or authorized reseller for an up to date copy of the Patton Trinity CLI Reference Guide.
 - Use the **Web Wizards** available via the Patton portal. Contact Patton or authorized reseller for access.

If not using the Auto-Provisioning method you will need the SIP Parameter values of your babyTEL account. See the section on Manual Configuration below for instruction on how to obtain these values.



Auto-Provisioning

If you purchase the device from babyTEL or provide us with the MAC address of a supported Patton device you purchased elsewhere, you may prefer this configuration method for its ease of use however this method has limited scope with respect to the full range of configuration options available with Patton Trinity devices as it only provides control over configuring SIP parameter and channel assignments.

The babyTEL SIP parameters and channel assignments are configured automatically via the babyTEL/Patton Remote Configuration Service (RCS). The RCS is made up of two components:

- a) The Patton Redirect Server (PRS) available via the Patton Cloud.
- b) The babyTEL Provisioning Server (BPS).

Step 1 – Notify babyTEL of device’s MAC address

The first step is to provide babyTEL with the device’s MAC address. If you’ve purchased the device through babyTEL or one of its agents as part of the bundled service offering, babyTEL will already have that information and there is nothing for you to do.

Step 2 – babyTEL creates device configuration

The babyTEL Provisioning Server creates and maintains the device’s configuration and associates it with the provided MAC address. You can contact the babyTEL service desk (service@babytel.net) to request a copy of the configuration for viewing or request changes to the device’s channel assignments.

Step 3 – babyTEL updates the Patton Redirect Server

babyTEL uses the MAC address to update the PRS. The first time the device powers up with access to the Internet it connects to the PRS. The PRS provides the BPS address to the device.

Step 4 – Device connects to babyTEL Provisioning Server

Once connected to the BPS the device receives the configuration settings it needs to connect to the babyTEL service (VoIP Softswitch).


Step 5 – Device connects to the babyTEL VoIP Softswitch

With the correct configuration in place the device is able to connect and authenticate with babyTEL. The device can now register to receive calls and can make calls using its configured credentials.


Plug-n-Play Deployment

From a customer’s perspective, the auto-provisioning mechanism described above enables plug-n-play deployment of Patton SmartNode products. The following diagrams illustrate the behind the scene activity that make this possible, starting with customer perspective diagrams, which provide a high level of detail followed with more detailed diagrams covering technical aspects of the workflow.


Auto-Provisioning Overview

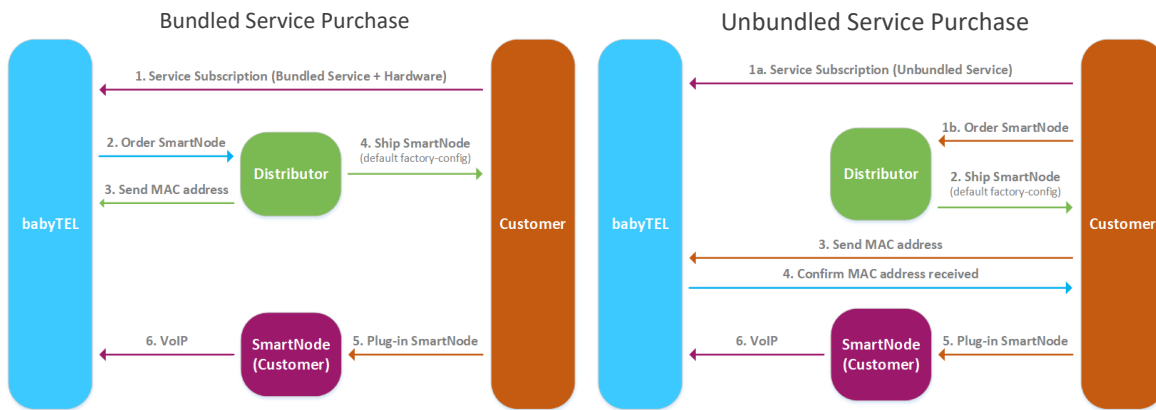

Device Provisioning via Redirect Server in Patton Cloud

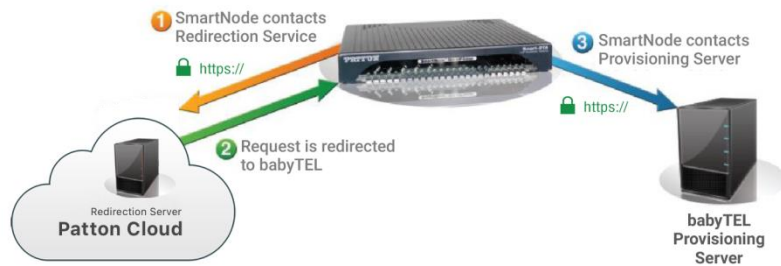

Details Auto-Provisioning Workflow

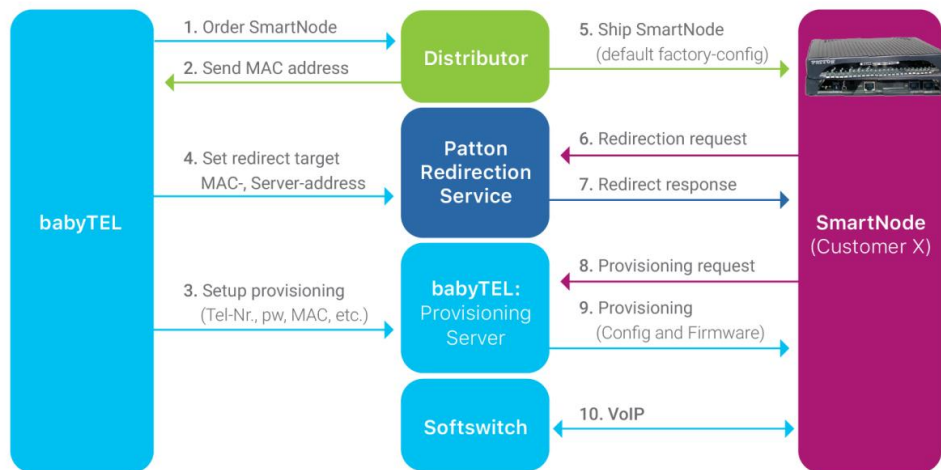

Manual Configuration

Manual Configuration Methods

Command Line Interface & Web Wizard Users

Use of the Command Line Interface, available via the Patton device console, or the Web Wizards, available via the Patton portal, is outside the scope of this document. Contact Patton or authorized reseller for information on or assistance with these manual configuration methods.

Patton Trinity Configuration File

This configuration method involves the use of a text editor to customize a configuration file according to the steps outlined below.

Step 1 - Gather all the necessary information

Your User ID and Web password were provided to you in the Signup Confirmation email. Go to the babyTEL website (www.babytel.net) and login using your ID and password. (The login command can be found at the top right corner of the page.) Click on **babyTEL Service** to expand the menu and then click on **SIP Parameters**. A page similar to the example shown below will be displayed, with values relevant to your account.

babyTEL Plan

babyTEL Service

- ..Telephony Feature Settings
- 1 ..Configure my Messaging
- ..Change my Messaging Password
- ..911 locations
- 2 **..SIP Parameters**
- ..Device Configuration Info
- ..Request support

Account

babyVillage

SIP Parameters

Display Name: Escher, Maurits

User ID: 15144480593

Authentication ID: 15144480593

SIP Password: Show password 3

Domain/Realm: sip.babytel.ca

SIP Proxy: sip.babytel.ca

SIP Proxy port: 5060

Outbound Proxy: nat2.babytel.ca

Outbound Proxy port: 5065

Please have this information at hand when you configure your system.

Step 2 – Create a startup-config file

Use a text editor to customize a Patton configuration file called startup-config according to your specific needs and account parameters. Download the latest babyTEL template for this file at this location: https://ca.babytel.net/configuration/babyTEL_Patton_Trinity_Startup-Config_Template.txt.


Contact Patton or visit <https://www.patton.com/manuals> to get the latest copy of a Patton Trinity configuration guide with details on Trinity configuration commands and information on how to make configuration changes beyond what is outlined here.

Once modified according to your needs you must upload the startup-config file to the device. Instructions on how to do that are provided in step 3.


Appendix A shows a copy of the startup-config template with babyTEL specific settings. Settings that you may need to modify for your specific environment are highlighted in yellow. SIP Parameter labels that you will need to replace with values specific to your babyTEL account are formatted as <label> (displayed in a blue/bold font). These tokens should be replaced by the corresponding SIP parameters specific to your babyTEL account as described in Step 1 above. For example, using the data above the token <User ID> would be replaced by **15144480593**.

Step 3 - Load the startup-config file

1. Connect to your Patton device (HTTP/HTTPS)
2. Click the menu button (☰) from the upper left-hand side
3. Select **System/Configuration** Files and a window will pop-up.

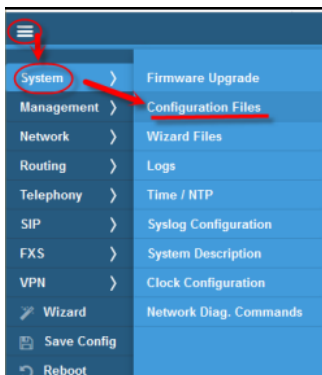

4. Click the + sign to add a new startup-config.

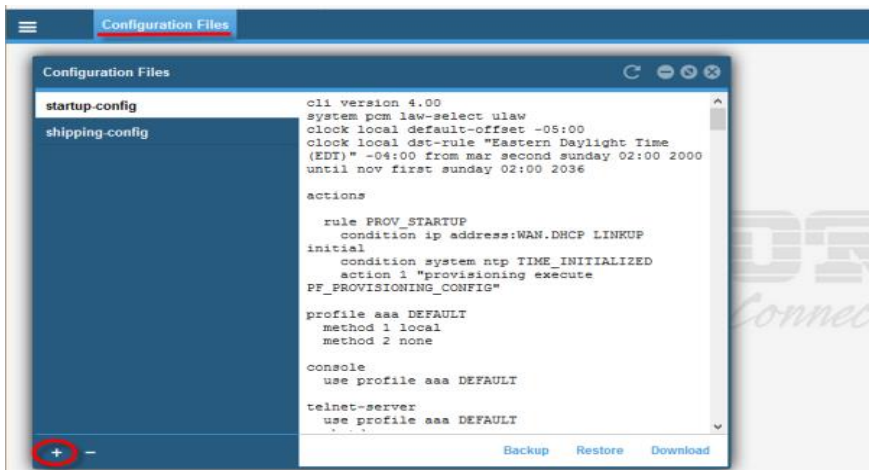

5. Browse to the modified saved configuration file and then add it as the 'startup-config' and click 'OK'. The configuration will now be saved and loaded on the next boot up.
6. Reboot the device. Click the menu button (☰) and select 'Reboot'. Answer 'Yes' to the pop-up window to initiate the reboot.



Contact

If you require assistance you can contact us 24 hours a day, 7 days a week, by email at service@babytel.net.

You can also reach us by phone 7 days a week from 9 AM to midnight, Eastern Time at:

Canada	USA
Montréal: 514 201-6550 Toronto: 416 848-0990 Toll free: 1-877-258-VoIP (8647)	Toll free: 1-877-808-VoIP (8647)

Address: 1425 René-Lévesque, Suite 700, Montréal, Québec, Canada H3G 1T7

Website: www.babytel.net

Thank you for choosing babyTEL as your Internet Telephony Service Provider. We at babyTEL will continually strive to provide you a reliable service. As well, we will be regularly adding additional capabilities that you may find useful. Please keep up-to-date by visiting us at the babyTEL website. Pleasant surprises may await you.



APPENDIX A

```
#####  
# Template for Configuring Patton Trinity SN4141 for use with babyTEL  
# =====  
#  
# This template covers the following configuration options:  
#  
# Routing Options:  
#  
# Hunt Group: Single authenticated account with its inbound calls hunting cyclically  
# across all FXS ports.  
# Ring All : Single authenticated account with its inbound calls ringing all  
# available FXS ports simultaneously.  
# Per Line : One or more authenticated accounts, each with one or more users (DIDs)  
# and each user ringing at least one FXS port.  
#  
# Line Type Options:  
#  
# FAX : The FXS port is optimized for Fax calls.  
# MODEM : The FXS port is optimized for Modem or Alarm system calls.  
# DEFAULT : The FXS port is optimized for Voice calls.  
#  
# =====  
#  
  
cli version 4.00  
system pcm law-select ulaw  
clock local default-offset -05:00  
clock local dst-rule "Eastern Daylight Time (EDT)" +1:00 from mar second sunday 02:00 2000 until nov  
first sunday 02:00 2036  
  
actions  
  
rule PROV_STARTUP  
condition ip address:WAN.DHCP LINKUP initial  
condition system ntp TIME_INITIALIZED  
action 1 "provisioning execute PF_PROVISIONING_CONFIG"  
  
profile aaa DEFAULT  
method 1 local  
method 2 none  
  
console  
use profile aaa DEFAULT  
  
telnet-server  
use profile aaa DEFAULT  
shutdown  
  
ssh-server  
use profile aaa DEFAULT
```



babyTEL Patton Trinity Configuration Guide

```
no shutdown

snmp-server
shutdown

web-server
protocol http port 80 redirect-to-https
protocol https port 443
use profile aaa DEFAULT
no shutdown

ntp
server ntp.babytel.ca
no shutdown

profile napt NAPT_WAN

dns-server
host 192.168.1.1 smartnode.local
relay dns-client
shutdown

#####
# Manual DNS Client configuration #
#####
#
# Uncomment this section for STATIC IP configuration on ethernet port 0/0
# -----
#dns-client
# name-server 0.0.0.0
# name-server 0.0.0.0
#
# SEE BELOW FOR IP ADDRESS AND DEFAULT GATEWAY CONFIGURATION <<<
# =====

profile dhcp-server DHCPS_LAN
network 192.168.1.0/24
lease 24 hours
default-router 192.168.1.1
domain-name-server 192.168.1.1
include 192.168.1.10 192.168.1.99

profile tls DEFAULT
authentication incoming
authentication outgoing
private-key pki:private-key/DEFAULT
own-certificate 1 pki:certificate/DEFAULT
diffie-hellman-parameters pki:diffie-hellman-parameters/DEFAULT-2048

profile provisioning PF_PROVISIONING_CONFIG
destination configuration
use profile tls DEFAULT
location 1
https://redirect.patton.com/${system.serial};mac=${system.mac};serial=${system.serial};hwMajor=${system
.hw.major};hwMinor=${system.hw.minor};swMajor=${system.sw.major};swMinor=${system.sw.minor};sw
```




babyTEL Patton Trinity Configuration Guide

```
Date=$(system.sw.date);productName=$(system.product.name);cliMajor=$(cli.major);cliMinor=$(cli.minor);osName=Trinity;subDirTrinity=/Trinity;subDirSmartWare=;dhcp66=$(dhcp.66);dhcp67=$(dhcp.67)
```

```
location 2 $(dhcp.66)
location 3 $(dhcp.66)/$(system.serial).cfg
location 4 http://$(dhcp.66)/$(dhcp.67)
location 5 http://$(dhcp.66)/$(system.serial).cfg
location 6 tftp://$(dhcp.66)/$(dhcp.67)
location 7 tftp://$(dhcp.66)/$(system.serial).cfg
activation reload immediate
```

```
profile fxs DEFAULT_EU
electrical-standard etsi
caller-id standard fsk-etsi presentation mid-ring
```

```
profile fxs DEFAULT_US
electrical-standard bell
caller-id standard fsk-bell presentation mid-ring
```

```
profile fxs-supplementary-services DEFAULT
toggle-call pattern !
```

```
profile fxs-supplementary-services FAX_MODEM
no call-hold
no call-waiting
no drop-passive-call
no drop-active-call
no toggle-call
no call-transfer
no park-call
no aoc emit relay
```

```
profile call-progress-tone defaultAlertingtone
play 1 1000 first-tone 440 -19 second-tone 480 -19
pause 2 3000
```

```
profile call-progress-tone defaultBusytone
play 1 500 first-tone 480 -24 second-tone 620 -24
pause 2 500
```

```
profile call-progress-tone defaultCongestiontone
play 1 250 first-tone 480 -24 second-tone 620 -24
pause 2 250
```

```
profile call-progress-tone defaultDialtone
play 1 1000 first-tone 350 -13 second-tone 440 -13
```

```
profile call-progress-tone defaultReleasetone
play 1 250 first-tone 480 -24 second-tone 620 -24
pause 2 250
```

```
profile tone-set DEFAULT
```

```
profile voip DEFAULT
codec 1 g729 rx-length 20 tx-length 20
codec 2 g711ulaw64k rx-length 20 tx-length 20
```



babyTEL Patton Trinity Configuration Guide

```
dtmf-relay rtp
fax transmission 1 relay t38-udp
fax transmission 2 bypass g711ulaw64k rx-length 20 tx-length 20
modem transmission 1 bypass g711ulaw64k rx-length 20 tx-length 20
```

```
profile voip FAX
codec 1 g711ulaw64k rx-length 20 tx-length 20
dtmf-relay rtp
fax transmission 1 relay t38-udp
fax transmission 2 bypass g711ulaw64k rx-length 20 tx-length 20
```

```
profile voip MODEM
codec 1 g711ulaw64k rx-length 20 tx-length 20
dtmf-relay inband
modem transmission 1 bypass g711ulaw64k rx-length 20 tx-length 20
```

```
profile pstn DEFAULT
```

```
profile ringing-cadence DEFAULT
play 1 1000
pause 2 4000
```

```
profile rip DEFAULT
```

```
profile sip DEFAULT
```

```
#####
# Configure STATIC or DHCP IP address on WAN ethernet port 0/0 #
#####
context ip ROUTER
```

```
# Uncomment this section for DHCP configuration on ethernet port 0/0
# -----
# interface WAN
# ipaddress DHCP dhcp
# use profile napt NAPT_WAN DHCP
#
## Else for STATIC IP configuration uncomment and enter desired IP address and gateway
# -----
# interface WAN
# ipaddress STATIC 0.0.0.0/24
#
# routing-table DEFAULT
# route 0.0.0.0/0 gateway 0.0.0.0 metric 0
#
# DON'T FORGET TO UNCOMMENT ONE OF THE ABOVE SECTIONS <<<
# =====
```

```
interface LAN
ipaddress LAN 192.168.1.1/24
```

```
routing-table DEFAULT
```

```
bgp
shutdown
```



babyTEL Patton Trinity Configuration Guide

```
rip
 shutdown
```

```
context ip ROUTER
 use profile dhcp-server DHCPS_LAN
```

```
#####
# Enter Patton cloud account Organization Key or leave as is for no account #
#####
nodems-client
 server nodems.patton.io
 organization-key <Organization Key>
 resource any
 no shutdown
```

```
profile packetsmart DEFAULT
```

```
profile ppp DEFAULT
```

```
cwmp-client
 no discovery
 bind ipaddress ROUTER WAN DHCP
 session-retry-maximum 1
 shutdown
```

```
stun
 shutdown
```

```
context cs SWITCH
 digit-collection timeout 3
 no shutdown
```

```
#####
# Enter Your Display Name #
#####
 mapping-table calling-e164 to calling-name CNAM
#
# Uncomment this section for single CNAM configuration
# -----
# map default to "<Display Name>"
#
## Else for multiple CLI/CNAM configuration uncomment unnecessary lines or add lines as needed
# -----
# map <User ID 1> to "<Display Name 1>"
# map <User ID 2> to "<Display Name 2>"
# map <User ID 3> to "<Display Name 3>"
#
# DON'T FORGET TO UNCOMMENT ONE OF THE ABOVE SECTIONS <<<
# =====
```

```
#####
# Route Inbound Calls to FXS Ports #
#####
 routing-table called-e164 RT_TO_FXS
```



```
#
# Uncomment this section for Hunt Group configuration
# -----
# route <User ID> dest-service HUNTPORTS
#
## Else uncomment this section for Ring All configuration
# -----
# route <User ID> dest-service ALLPORTS
#
## Else uncomment from this section lines needed for Per Port configuration
# -----
# route <User ID 1> dest-interface IF_FXS_00
# route <User ID 2> dest-interface IF_FXS_01
# route <User ID 3> dest-interface IF_FXS_02
# route <User ID 4> dest-interface IF_FXS_03
# route <User ID 5> dest-interface IF_FXS_04
# route <User ID 6> dest-interface IF_FXS_05
# route <User ID 7> dest-interface IF_FXS_06
# route <User ID 8> dest-interface IF_FXS_07

#
# DON'T FORGET TO UNCOMMENT ONE OF THE ABOVE SECTIONS <<<
# -----

routing-table called-e164 RT_TO_SIP_GW1
route [2-9]11T!0 dest-interface IF_GW1 CNAM
route *98T!0 dest-interface IF_GW1 CNAM
route *72[0-4]!0 dest-interface IF_GW1 CNAM
route 1..... dest-interface IF_GW1 CNAM
route [2-9]..... dest-interface IF_GW1 CNAM
route 011..T dest-interface IF_GW1 CNAM

routing-table called-e164 RT_TO_SIP_GW2
route [2-9]11T!0 dest-interface IF_GW2 CNAM
route *98T!0 dest-interface IF_GW2 CNAM
route *72[0-4]!0 dest-interface IF_GW2 CNAM
route 1..... dest-interface IF_GW2 CNAM
route [2-9]..... dest-interface IF_GW2 CNAM
route 011..T dest-interface IF_GW2 CNAM

routing-table called-e164 RT_TO_SIP_GW3
route [2-9]11T!0 dest-interface IF_GW3 CNAM
route *98T!0 dest-interface IF_GW3 CNAM
route *72[0-4]!0 dest-interface IF_GW3 CNAM
route 1..... dest-interface IF_GW3 CNAM
route [2-9]..... dest-interface IF_GW3 CNAM
route 011..T dest-interface IF_GW3 CNAM

routing-table called-e164 RT_TO_SIP_GW4
route [2-9]11T!0 dest-interface IF_GW4 CNAM
route *98T!0 dest-interface IF_GW4 CNAM
route *72[0-4]!0 dest-interface IF_GW4 CNAM
route 1..... dest-interface IF_GW4 CNAM
route [2-9]..... dest-interface IF_GW4 CNAM
route 011..T dest-interface IF_GW4 CNAM
```



```
routing-table called-e164 RT_TO_SIP_GW5
route [2-9]11T!0 dest-interface IF_GW5 CNAM
route *98T!0 dest-interface IF_GW5 CNAM
route *72[0-4]!0 dest-interface IF_GW5 CNAM
route 1..... dest-interface IF_GW5 CNAM
route [2-9]..... dest-interface IF_GW5 CNAM
route 011..T dest-interface IF_GW5 CNAM
```

```
routing-table called-e164 RT_TO_SIP_GW6
route [2-9]11T!0 dest-interface IF_GW6 CNAM
route *98T!0 dest-interface IF_GW6 CNAM
route *72[0-4]!0 dest-interface IF_GW6 CNAM
route 1..... dest-interface IF_GW6 CNAM
route [2-9]..... dest-interface IF_GW6 CNAM
route 011..T dest-interface IF_GW6 CNAM
```

```
routing-table called-e164 RT_TO_SIP_GW7
route [2-9]11T!0 dest-interface IF_GW7 CNAM
route *98T!0 dest-interface IF_GW7 CNAM
route *72[0-4]!0 dest-interface IF_GW7 CNAM
route 1..... dest-interface IF_GW7 CNAM
route [2-9]..... dest-interface IF_GW7 CNAM
route 011..T dest-interface IF_GW7 CNAM
```

```
routing-table called-e164 RT_TO_SIP_GW8
route [2-9]11T!0 dest-interface IF_GW8 CNAM
route *98T!0 dest-interface IF_GW8 CNAM
route *72[0-4]!0 dest-interface IF_GW8 CNAM
route 1..... dest-interface IF_GW8 CNAM
route [2-9]..... dest-interface IF_GW8 CNAM
route 011..T dest-interface IF_GW8 CNAM
```

```
interface sip IF_GW1
bind context sip-gateway GW_1
route call dest-table RT_TO_FXS
remote <Outbound Proxy> <Outbound Proxy Port>
address-translation incoming-call called-e164 p-called-party-id
```

```
#
# Uncomment the required voip profile
# -----
# use profile voip FAX
# use profile voip MODEM
# use profile voip DEFAULT
#
# DON'T FORGET TO UNCOMMENT A PROFILE <<<
# -----
trust remote
```

```
interface sip IF_GW2
bind context sip-gateway GW_2
route call dest-table RT_TO_FXS
remote <Outbound Proxy> <Outbound Proxy Port>
address-translation incoming-call called-e164 p-called-party-id
#
```



```
# Uncomment the required voip profile
# -----
# use profile voip FAX
# use profile voip MODEM
# use profile voip DEFAULT
#
# DON'T FORGET TO UNCOMMENT A PROFILE <<<
# -----
    trust remote

interface sip IF_GW3
    bind context sip-gateway GW_3
    route call dest-table RT_TO_FXS
    remote <Outbound Proxy> <Outbound Proxy Port>
    address-translation incoming-call called-e164 p-called-party-id
#
# Uncomment the required voip profile
# -----
# use profile voip FAX
# use profile voip MODEM
# use profile voip DEFAULT
#
# DON'T FORGET TO UNCOMMENT A PROFILE <<<
# -----
    trust remote

interface sip IF_GW4
    bind context sip-gateway GW_4
    route call dest-table RT_TO_FXS
    remote <Outbound Proxy> <Outbound Proxy Port>
    address-translation incoming-call called-e164 p-called-party-id
#
# Uncomment the required voip profile
# -----
# use profile voip FAX
# use profile voip MODEM
# use profile voip DEFAULT
#
# DON'T FORGET TO UNCOMMENT A PROFILE <<<
# -----
    trust remote

interface sip IF_GW5
    bind context sip-gateway GW_5
    route call dest-table RT_TO_FXS
    remote <Outbound Proxy> <Outbound Proxy Port>
    address-translation incoming-call called-e164 p-called-party-id
#
# Uncomment the required voip profile
# -----
# use profile voip FAX
# use profile voip MODEM
# use profile voip DEFAULT
#
# DON'T FORGET TO UNCOMMENT A PROFILE <<<
```



babyTEL Patton Trinity Configuration Guide

```
# -----
trust remote

interface sip IF_GW6
  bind context sip-gateway GW_6
  route call dest-table RT_TO_FXS
  remote <Outbound Proxy> <Outbound Proxy Port>
  address-translation incoming-call called-e164 p-called-party-id
#
# Uncomment the required voip profile
# -----
# use profile voip FAX
# use profile voip MODEM
# use profile voip DEFAULT
#
# DON'T FORGET TO UNCOMMENT A PROFILE <<<
# -----
trust remote

interface sip IF_GW7
  bind context sip-gateway GW_7
  route call dest-table RT_TO_FXS
  remote <Outbound Proxy> <Outbound Proxy Port>
  address-translation incoming-call called-e164 p-called-party-id
#
# Uncomment the required voip profile
# -----
# use profile voip FAX
# use profile voip MODEM
# use profile voip DEFAULT
#
# DON'T FORGET TO UNCOMMENT A PROFILE <<<
# -----
trust remote

interface sip IF_GW8
  bind context sip-gateway GW_8
  route call dest-table RT_TO_FXS
  remote <Outbound Proxy> <Outbound Proxy Port>
  address-translation incoming-call called-e164 p-called-party-id
#
# Uncomment the required voip profile
# -----
# use profile voip FAX
# use profile voip MODEM
# use profile voip DEFAULT
#
# DON'T FORGET TO UNCOMMENT A PROFILE <<<
# -----
trust remote

#####
# Configure ACD if not routing Per Line #
#####
#
```



```
# Uncomment this section for Hunt Group configuration
# -----
# service hunt-group HUNTPORTS
# cyclic
# drop-cause normal-unspecified
# drop-cause no-circuit-channel-available
# drop-cause network-out-of-order
# drop-cause temporary-failure
# drop-cause switching-equipment-congestion
# drop-cause access-info-discarded
# drop-cause circuit-channel-not-available
# drop-cause resources-unavailable
# route call 1 dest-interface IF_FXS_00
# route call 2 dest-interface IF_FXS_01
# route call 3 dest-interface IF_FXS_02
# route call 4 dest-interface IF_FXS_03
# route call 5 dest-interface IF_FXS_04
# route call 6 dest-interface IF_FXS_05
# route call 7 dest-interface IF_FXS_06
# route call 8 dest-interface IF_FXS_07
#
## Else uncomment this section for Ring All configuration
# -----
# service distribution-group ALLPORTS
# route call 1 dest-interface IF_FXS_00
# route call 2 dest-interface IF_FXS_01
# route call 3 dest-interface IF_FXS_02
# route call 4 dest-interface IF_FXS_03
# route call 5 dest-interface IF_FXS_04
# route call 6 dest-interface IF_FXS_05
# route call 7 dest-interface IF_FXS_06
# route call 8 dest-interface IF_FXS_07
#
## Else leave the above sections commented for Per Line configuration
# -----

interface fxs IF_FXS_00
  route call dest-table RT_TO_SIP_GW1
#
# Uncomment the required fxs-supplementary-services profile
# -----
# use profile fxs-supplementary-services FAX_MODEM
# use profile fxs-supplementary-services DEFAULT
#
# DON'T FORGET TO UNCOMMENT A PROFILE <<<
# -----

interface fxs IF_FXS_01
  route call dest-table RT_TO_SIP_GW2
#
# Uncomment the required fxs-supplementary-services profile
# -----
# use profile fxs-supplementary-services FAX_MODEM
# use profile fxs-supplementary-services DEFAULT
#
```




```
# DON'T FORGET TO UNCOMMENT A PROFILE <<<
# -----

interface fxs IF_FXS_02
  route call dest-table RT_TO_SIP_GW3
#
# Uncomment the required fxs-supplementary-services profile
# -----
# use profile fxs-supplementary-services FAX_MODEM
# use profile fxs-supplementary-services DEFAULT
#
# DON'T FORGET TO UNCOMMENT A PROFILE <<<
# -----

interface fxs IF_FXS_03
  route call dest-table RT_TO_SIP_GW4
#
# Uncomment the required fxs-supplementary-services profile
# -----
# use profile fxs-supplementary-services FAX_MODEM
# use profile fxs-supplementary-services DEFAULT
#
# DON'T FORGET TO UNCOMMENT A PROFILE <<<
# -----

interface fxs IF_FXS_04
  route call dest-table RT_TO_SIP_GW5
#
# Uncomment the required fxs-supplementary-services profile
# -----
# use profile fxs-supplementary-services FAX_MODEM
# use profile fxs-supplementary-services DEFAULT
#
# DON'T FORGET TO UNCOMMENT A PROFILE <<<
# -----

interface fxs IF_FXS_05
  route call dest-table RT_TO_SIP_GW6
#
# Uncomment the required fxs-supplementary-services profile
# -----
# use profile fxs-supplementary-services FAX_MODEM
# use profile fxs-supplementary-services DEFAULT
#
# DON'T FORGET TO UNCOMMENT A PROFILE <<<
# -----

interface fxs IF_FXS_06
  route call dest-table RT_TO_SIP_GW7
#
# Uncomment the required fxs-supplementary-services profile
# -----
# use profile fxs-supplementary-services FAX_MODEM
# use profile fxs-supplementary-services DEFAULT
#
```



babyTEL Patton Trinity Configuration Guide

```
# DON'T FORGET TO UNCOMMENT A PROFILE <<<
# -----

interface fxs IF_FXS_07
  route call dest-table RT_TO_SIP_GW8
#
# Uncomment the required fxs-supplementary-services profile
# -----
# use profile fxs-supplementary-services FAX_MODEM
# use profile fxs-supplementary-services DEFAULT
#
# DON'T FORGET TO UNCOMMENT A PROFILE <<<
# -----

#####
# Enter your SIP Parameters from your babyTEL account #
#####
#
# Uncomment this section for Hunt Group or Ring All configuration
# -----
#authentication-service AS_1
# username <Authentication ID> password <SIP Password>
#
## Else for Per Line configuration uncomment lines needed
# -----
#authentication-service AS_1
# username <Authentication ID 1> password <SIP Password 1>

#authentication-service AS_2
# username <Authentication ID 2> password <SIP Password 2>

#authentication-service AS_3
# username <Authentication ID 3> password <SIP Password 3>

#authentication-service AS_4
# username <Authentication ID 4> password <SIP Password 4>

#authentication-service AS_5
# username <Authentication ID 5> password <SIP Password 5>

#authentication-service AS_6
# username <Authentication ID 6> password <SIP Password 6>

#authentication-service AS_7
# username <Authentication ID 7> password <SIP Password 7>

#authentication-service AS_8
# username <Authentication ID 8> password <SIP Password 8>
#
# DON'T FORGET TO UNCOMMENT ONE OF THE ABOVE SECTIONS <<<
# -----

#####
# Configure Outbound Authentication, DIDs and (Virtual Number) Aliases #
#####
```



babyTEL Patton Trinity Configuration Guide

```
#
# Uncomment this section for Hunt Group or Ring All configuration
# -----
#Location-service LS_1
# domain 1 <Outbound Proxy> <Outbound Proxy Port>
# match-any-domain
#
# identity <User ID>
## You can specify multiple alias DIDs per account
# alias expression <User IDa>
# alias expression <User IDb>
#
# authentication outbound
#   authenticate 1 authentication-service AS_1 username <Authentication ID>
#
# registration outbound
#   registrar <Outbound Proxy> <Outbound Proxy Port>
#   transport-protocol force udp
#   lifetime 60
#   register auto
#
## Else for Per Line configuration uncomment sections needed
# -----
#Location-service LS_1
# domain 1 <Outbound Proxy> <Outbound Proxy Port>
# match-any-domain
#
# identity <User ID 1>
## You can specify multiple alias DIDs per account
# alias expression <User ID 1a>
# alias expression <User ID 1b>
#
# authentication outbound
#   authenticate 1 authentication-service AS_1 username <Authentication ID 1>
#
# registration outbound
#   registrar <Outbound Proxy> <Outbound Proxy Port>
#   transport-protocol force udp
#   lifetime 60
#   register auto
#
#Location-service LS_2
# domain 1 <Outbound Proxy> <Outbound Proxy Port>
# match-any-domain
#
# identity <User ID 2>
## You can specify multiple alias DIDs per account
# alias expression <User ID 2a>
# alias expression <User ID 2b>
#
# authentication outbound
#   authenticate 1 authentication-service AS_2 username <Authentication ID 2>
#
# registration outbound
#   registrar <Outbound Proxy> <Outbound Proxy Port>
```



babyTEL Patton Trinity Configuration Guide

```
# transport-protocol force udp
# lifetime 60
# register auto
#
#Location-service LS_3
# domain 1 <Outbound Proxy> <Outbound Proxy Port>
# match-any-domain
#
# identity <User ID 3>
## You can specify multiple alias DIDs per account
# alias expression <User ID 3a>
# alias expression <User ID 3b>
#
# authentication outbound
# authenticate 1 authentication-service AS_3 username <Authentication ID 3>
#
# registration outbound
# registrar <Outbound Proxy> <Outbound Proxy Port>
# transport-protocol force udp
# lifetime 60
# register auto
#
#Location-service LS_4
# domain 1 <Outbound Proxy> <Outbound Proxy Port>
# match-any-domain
#
# identity <User ID 4>
## You can specify multiple alias DIDs per account
# alias expression <User ID 4a>
# alias expression <User ID 4b>
#
# authentication outbound
# authenticate 1 authentication-service AS_4 username <Authentication ID 4>
#
# registration outbound
# registrar <Outbound Proxy> <Outbound Proxy Port>
# transport-protocol force udp
# lifetime 60
# register auto
#
#Location-service LS_5
# domain 1 <Outbound Proxy> <Outbound Proxy Port>
# match-any-domain
#
# identity <User ID 5>
## You can specify multiple alias DIDs per account
# alias expression <User ID 5a>
# alias expression <User ID 5b>
#
# authentication outbound
# authenticate 1 authentication-service AS_5 username <Authentication ID 5>
#
# registration outbound
# registrar <Outbound Proxy> <Outbound Proxy Port>
# transport-protocol force udp
```



```
# lifetime 60
# register auto
#
#Location-service LS_6
# domain 1 <Outbound Proxy> <Outbound Proxy Port>
# match-any-domain
#
# identity <User ID 6>
## You can specify multiple alias DIDs per account
# alias expression <User ID 6a>
# alias expression <User ID 6b>
#
# authentication outbound
# authenticate 1 authentication-service AS_6 username <Authentication ID 6>
#
# registration outbound
# registrar <Outbound Proxy> <Outbound Proxy Port>
# transport-protocol force udp
# lifetime 60
# register auto
#
#Location-service LS_7
# domain 1 <Outbound Proxy> <Outbound Proxy Port>
# match-any-domain
#
# identity <User ID 7>
## You can specify multiple alias DIDs per account
# alias expression <User ID 7a>
# alias expression <User ID 7b>
#
# authentication outbound
# authenticate 1 authentication-service AS_7 username <Authentication ID 7>
#
# registration outbound
# registrar <Outbound Proxy> <Outbound Proxy Port>
# transport-protocol force udp
# lifetime 60
# register auto
#
#Location-service LS_8
# domain 1 <Outbound Proxy> <Outbound Proxy Port>
# match-any-domain
#
# identity <User ID 8>
## You can specify multiple alias DIDs per account
# alias expression <User ID 8a>
# alias expression <User ID 8b>
#
# authentication outbound
# authenticate 1 authentication-service AS_8 username <Authentication ID 8>
#
# registration outbound
# registrar <Outbound Proxy> <Outbound Proxy Port>
# transport-protocol force udp
# lifetime 60
```



babyTEL Patton Trinity Configuration Guide

```
# register auto
#
# DON'T FORGET TO UNCOMMENT ONE OF THE ABOVE OPTIONS <<<
# =====

# Uncomment this section for Hunt Group or Ring All configuration
# -----
#context sip-gateway GW_1
# Include this line if using the Patton encryption license
# -----
# proprietary-encryption babytel
# bind location-service LS_1
#
# interface IF_SIP
# transport-protocol udp+tcp 5060
# no transport-protocol tls
#
# Uncomment this option for DHCP configuration on ethernet port 0/0
# -----
# bind ipaddress ROUTER WAN DHCP
#
## Else for STATIC IP configuration uncomment this option
# -----
# bind ipaddress ROUTER WAN STATIC
#
# DON'T FORGET TO UNCOMMENT ONE OF THE ABOVE OPTIONS <<<
# =====
#
#context sip-gateway GW_1
# notify check-sync accept
# no shutdown
#
## Else for Per Line configuration uncomment each gateway as needed
# -----
#context sip-gateway GW_1
# Include this line if using the Patton encryption license
# -----
# proprietary-encryption babytel
# bind location-service LS_1
#
# interface IF_SIP
# transport-protocol udp+tcp 5060
# no transport-protocol tls
#
# Uncomment this option for DHCP configuration on ethernet port 0/0
# -----
# bind ipaddress ROUTER WAN DHCP
#
## Else for STATIC IP configuration uncomment this option
# -----
# bind ipaddress ROUTER WAN STATIC
#
# DON'T FORGET TO UNCOMMENT ONE OF THE ABOVE OPTIONS <<<
# =====
#
```



```
#context sip-gateway GW_1
# notify check-sync accept
# no shutdown
#
#context sip-gateway GW_2
# Include this line if using the Patton encryption license
#-----
# proprietary-encryption babytel
# bind location-service LS_2
#
# interface IF_SIP
# transport-protocol udp+tcp 5061
# no transport-protocol tls
#
# Uncomment this option for DHCP configuration on ethernet port 0/0
#-----
# bind ipaddress ROUTER WAN DHCP
#
## Else for STATIC IP configuration uncomment this option
#-----
# bind ipaddress ROUTER WAN STATIC
#
# DON'T FORGET TO UNCOMMENT ONE OF THE ABOVE OPTIONS <<<
#=====
#
#context sip-gateway GW_2
# notify check-sync accept
# no shutdown
#
#context sip-gateway GW_3
# Include this line if using the Patton encryption license
#-----
# proprietary-encryption babytel
# bind location-service LS_3
#
# interface IF_SIP
# transport-protocol udp+tcp 5062
# no transport-protocol tls
#
# Uncomment this option for DHCP configuration on ethernet port 0/0
#-----
# bind ipaddress ROUTER WAN DHCP
#
## Else for STATIC IP configuration uncomment this option
#-----
# bind ipaddress ROUTER WAN STATIC
#
# DON'T FORGET TO UNCOMMENT ONE OF THE ABOVE OPTIONS <<<
#=====
#
#context sip-gateway GW_3
# notify check-sync accept
# no shutdown
#
#context sip-gateway GW_4
```



```
# Include this line if using the Patton encryption license
#-----
# proprietary-encryption babytel
# bind location-service LS_4
#
# interface IF_SIP
# transport-protocol udp+tcp 5063
# no transport-protocol tls
#
# Uncomment this option for DHCP configuration on ethernet port 0/0
#-----
# bind ipaddress ROUTER WAN DHCP
#
## Else for STATIC IP configuration uncomment this option
#-----
# bind ipaddress ROUTER WAN STATIC
#
# DON'T FORGET TO UNCOMMENT ONE OF THE ABOVE OPTIONS <<<
# =====
#
#context sip-gateway GW_4
# notify check-sync accept
# no shutdown
#
#context sip-gateway GW_5
# Include this line if using the Patton encryption license
#-----
# proprietary-encryption babytel
# bind location-service LS_5
#
# interface IF_SIP
# transport-protocol udp+tcp 5064
# no transport-protocol tls
#
# Uncomment this option for DHCP configuration on ethernet port 0/0
#-----
# bind ipaddress ROUTER WAN DHCP
#
## Else for STATIC IP configuration uncomment this option
#-----
# bind ipaddress ROUTER WAN STATIC
#
# DON'T FORGET TO UNCOMMENT ONE OF THE ABOVE OPTIONS <<<
# =====
#
#context sip-gateway GW_5
# notify check-sync accept
# no shutdown
#
#context sip-gateway GW_6
# Include this line if using the Patton encryption license
#-----
# proprietary-encryption babytel
# bind location-service LS_6
```




```
#
# interface IF_SIP
# transport-protocol udp+tcp 5065
# no transport-protocol tls
#
# Uncomment this option for DHCP configuration on ethernet port 0/0
# -----
# bind ipaddress ROUTER WAN DHCP
#
## Else for STATIC IP configuration uncomment this option
# -----
# bind ipaddress ROUTER WAN STATIC
#
# DON'T FORGET TO UNCOMMENT ONE OF THE ABOVE OPTIONS <<<
# =====
#
#context sip-gateway GW_6
# notify check-sync accept
# no shutdown
#
#context sip-gateway GW_7
# Include this line if using the Patton encryption license
#-----
# proprietary-encryption babytel
# bind location-service LS_7
#
# interface IF_SIP
# transport-protocol udp+tcp 5066
# no transport-protocol tls
#
# Uncomment this option for DHCP configuration on ethernet port 0/0
# -----
# bind ipaddress ROUTER WAN DHCP
#
## Else for STATIC IP configuration uncomment this option
# -----
# bind ipaddress ROUTER WAN STATIC
#
# DON'T FORGET TO UNCOMMENT ONE OF THE ABOVE OPTIONS <<<
# =====
#
#context sip-gateway GW_7
# notify check-sync accept
# no shutdown
#
#context sip-gateway GW_8
# Include this line if using the Patton encryption license
#-----
# proprietary-encryption babytel
# bind location-service LS_8
#
# interface IF_SIP
# transport-protocol udp+tcp 5067
# no transport-protocol tls
#
```



babyTEL Patton Trinity Configuration Guide

```
# Uncomment this option for DHCP configuration on ethernet port 0/0
# -----
# bind ipaddress ROUTER WAN DHCP
#
## Else for STATIC IP configuration uncomment this option
# -----
# bind ipaddress ROUTER WAN STATIC
#
# DON'T FORGET TO UNCOMMENT ONE OF THE ABOVE OPTIONS <<<
# =====
#
#context sip-gateway GW_8
# notify check-sync accept
# no shutdown
#
# DON'T FORGET TO UNCOMMENT ONE OF THE ABOVE SECTIONS <<<
# -----

sip-survivability
shutdown

port ethernet 0 0
  bind interface ROUTER WAN
  no shutdown

port ethernet 0 1
  bind interface ROUTER LAN
  no shutdown

#####
# Enter your User ID for the FXS ports to be used #
#####
port fxs 0 0
  use profile fxs DEFAULT_US
#
# Uncomment this line for Hunt Group or Ring All configuration
# -----
# subscriber-number <User ID>
#
## Else for Per Line configuration uncomment this line
# -----
# subscriber-number <User ID 1>
#
# DON'T FORGET TO UNCOMMENT ONE OF THE ABOVE LINE <<<
# -----
  bind interface SWITCH IF_FXS_00
  no shutdown

port fxs 0 1
  use profile fxs DEFAULT_US
#
# Uncomment this line for Hunt Group or Ring All configuration
# -----
# subscriber-number <User ID>
#
```



```
## Else for Per Line configuration uncomment this line
# -----
# subscriber-number <User ID 2>
#
# DON'T FORGET TO UNCOMMENT ONE OF THE ABOVE LINE <<<
# -----
    bind interface SWITCH IF_FXS_01
    no shutdown

port fxs 0 2
    use profile fxs DEFAULT_US
#
# Uncomment this line for Hunt Group or Ring All configuration
# -----
# subscriber-number <User ID>
#
## Else for Per Line configuration uncomment this line
# -----
# subscriber-number <User ID 3>
#
# DON'T FORGET TO UNCOMMENT ONE OF THE ABOVE LINE <<<
# -----
    bind interface SWITCH IF_FXS_02
    no shutdown

port fxs 0 3
    use profile fxs DEFAULT_US
#
# Uncomment this line for Hunt Group or Ring All configuration
# -----
# subscriber-number <User ID>
#
## Else for Per Line configuration uncomment this line
# -----
# subscriber-number <User ID 4>
#
# DON'T FORGET TO UNCOMMENT ONE OF THE ABOVE LINE <<<
# -----
    bind interface SWITCH IF_FXS_03
    no shutdown

port fxs 0 4
    use profile fxs DEFAULT_US
#
# Uncomment this line for Hunt Group or Ring All configuration
# -----
# subscriber-number <User ID>
#
## Else for Per Line configuration uncomment this line
# -----
# subscriber-number <User ID 5>
#
# DON'T FORGET TO UNCOMMENT ONE OF THE ABOVE LINE <<<
# -----
    bind interface SWITCH IF_FXS_04
```



```
no shutdown
```

```
port fxs 0 5
  use profile fxs DEFAULT_US
  #
  # Uncomment this line for Hunt Group or Ring All configuration
  # -----
  # subscriber-number <User ID>
  #
  ## Else for Per Line configuration uncomment this line
  # -----
  # subscriber-number <User ID 6>
  #
  # DON'T FORGET TO UNCOMMENT ONE OF THE ABOVE LINE <<<
  # -----
  bind interface SWITCH IF_FXS_05
  no shutdown
```

```
port fxs 0 6
  use profile fxs DEFAULT_US
  #
  # Uncomment this line for Hunt Group or Ring All configuration
  # -----
  # subscriber-number <User ID>
  #
  ## Else for Per Line configuration uncomment this line
  # -----
  # subscriber-number <User ID 7>
  #
  # DON'T FORGET TO UNCOMMENT ONE OF THE ABOVE LINE <<<
  # -----
  bind interface SWITCH IF_FXS_06
  no shutdown
```

```
port fxs 0 7
  use profile fxs DEFAULT_US
  #
  # Uncomment this line for Hunt Group or Ring All configuration
  # -----
  # subscriber-number <User ID>
  #
  ## Else for Per Line configuration uncomment this line
  # -----
  # subscriber-number <User ID 8>
  #
  # DON'T FORGET TO UNCOMMENT ONE OF THE ABOVE LINE <<<
  # -----
  bind interface SWITCH IF_FXS_07
  no shutdown
```